


Cowling

Let the Good Times Roll®

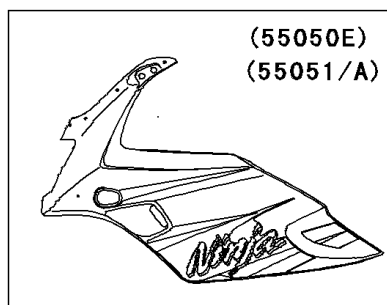

(55050B)	Red
(55050C)	Blue
(55050D)	Ebony
(55050E)	Violet
(55051)	Red
(55051A)	Silver

WD

1999 Ninja® 500R

PARTS LIST

Cowling

ITEM NAME	PART NUMBER	QUANTITY
CAP,MIRROR (Ref # 11012)	11012-1818	4
BRACKET,UPP COWLING (Ref # 11048)	11048-1368	1
COVER,INNER COWLING,CNT (Ref # 14090)	14090-1397	1
COVER,INNER COWLING,LH (Ref # 14090A)	14090-1398	1
COVER,INNER COWLING,RH (Ref # 14090B)	14090-1399	1
COVER,WINDSHIELD (Ref # 14090C)	14090-1488	1
WINDSHIELD (Ref # 39154)	39154-1125	1
TRIM,L=157 (Ref # 53044)	53044-1276	3
COWLING-ASSY.,UPP,F.RED (Ref # 55050B)	55050-5273-B1	1
MIRROR-ASSY,LH,EBONY (Ref # 56001)	56001-1376-6C	1
MIRROR-ASSY,RH,EBONY (Ref # 56001A)	56001-1377-6C	1
SCREW,TAPPING,5X15 (Ref # 92009)	92009-1479	4
SCREW,5X16,BLACK (Ref # 92009A)	92009-1654	8
SCREW,5X22 (Ref # 92009B)	92009-1660	3
NUT,CAP,6MM,BLACK (Ref # 92015)	92015-1170	4
NUT,CAP,8MM,BLACK (Ref # 92015A)	92015-1174	1
NUT,WELL,5MM (Ref # 92015B)	92015-1757	6
NUT (Ref # 92015C)	92015-1949	2
WASHER,NYLON,5.3X11.5X1.5 (Ref # 92022)	92022-1521	15
COLLAR,L=6.6 (Ref # 92143)	92143-1088	2
BOLT-FLANGED (Ref # 130)	130J0620	2
COLLAR (Ref # 92143A)	92143-1699	2
DAMPER,MIRROR (Ref # 92160)	92160-1089	2
WASHER,10.3X20X1 (Ref # 92200)	92200-1013	2
BRACKET,LOWER COWLING,RR,LH (Ref # 11045)	11045-1573	1
BRACKET,LOWER COWLING,RR,RH (Ref # 11045A)	11045-1574	1
BRACKET,LOWER COWLING,FR,LH (Ref # 11048)	11048-1685	1
BRACKET,LOWER COWLING,FR,RH (Ref # 11048A)	11048-1686	1
COWLING,LWR,F.RED (Ref # 55028)	55028-1161-B1	1