


1973 F9-A

PARTS DIAGRAM

SWING ARM/SHOCK ABSORBERS ('72-'73 F9/F9)

Kawasaki

Let the Good Times Roll®

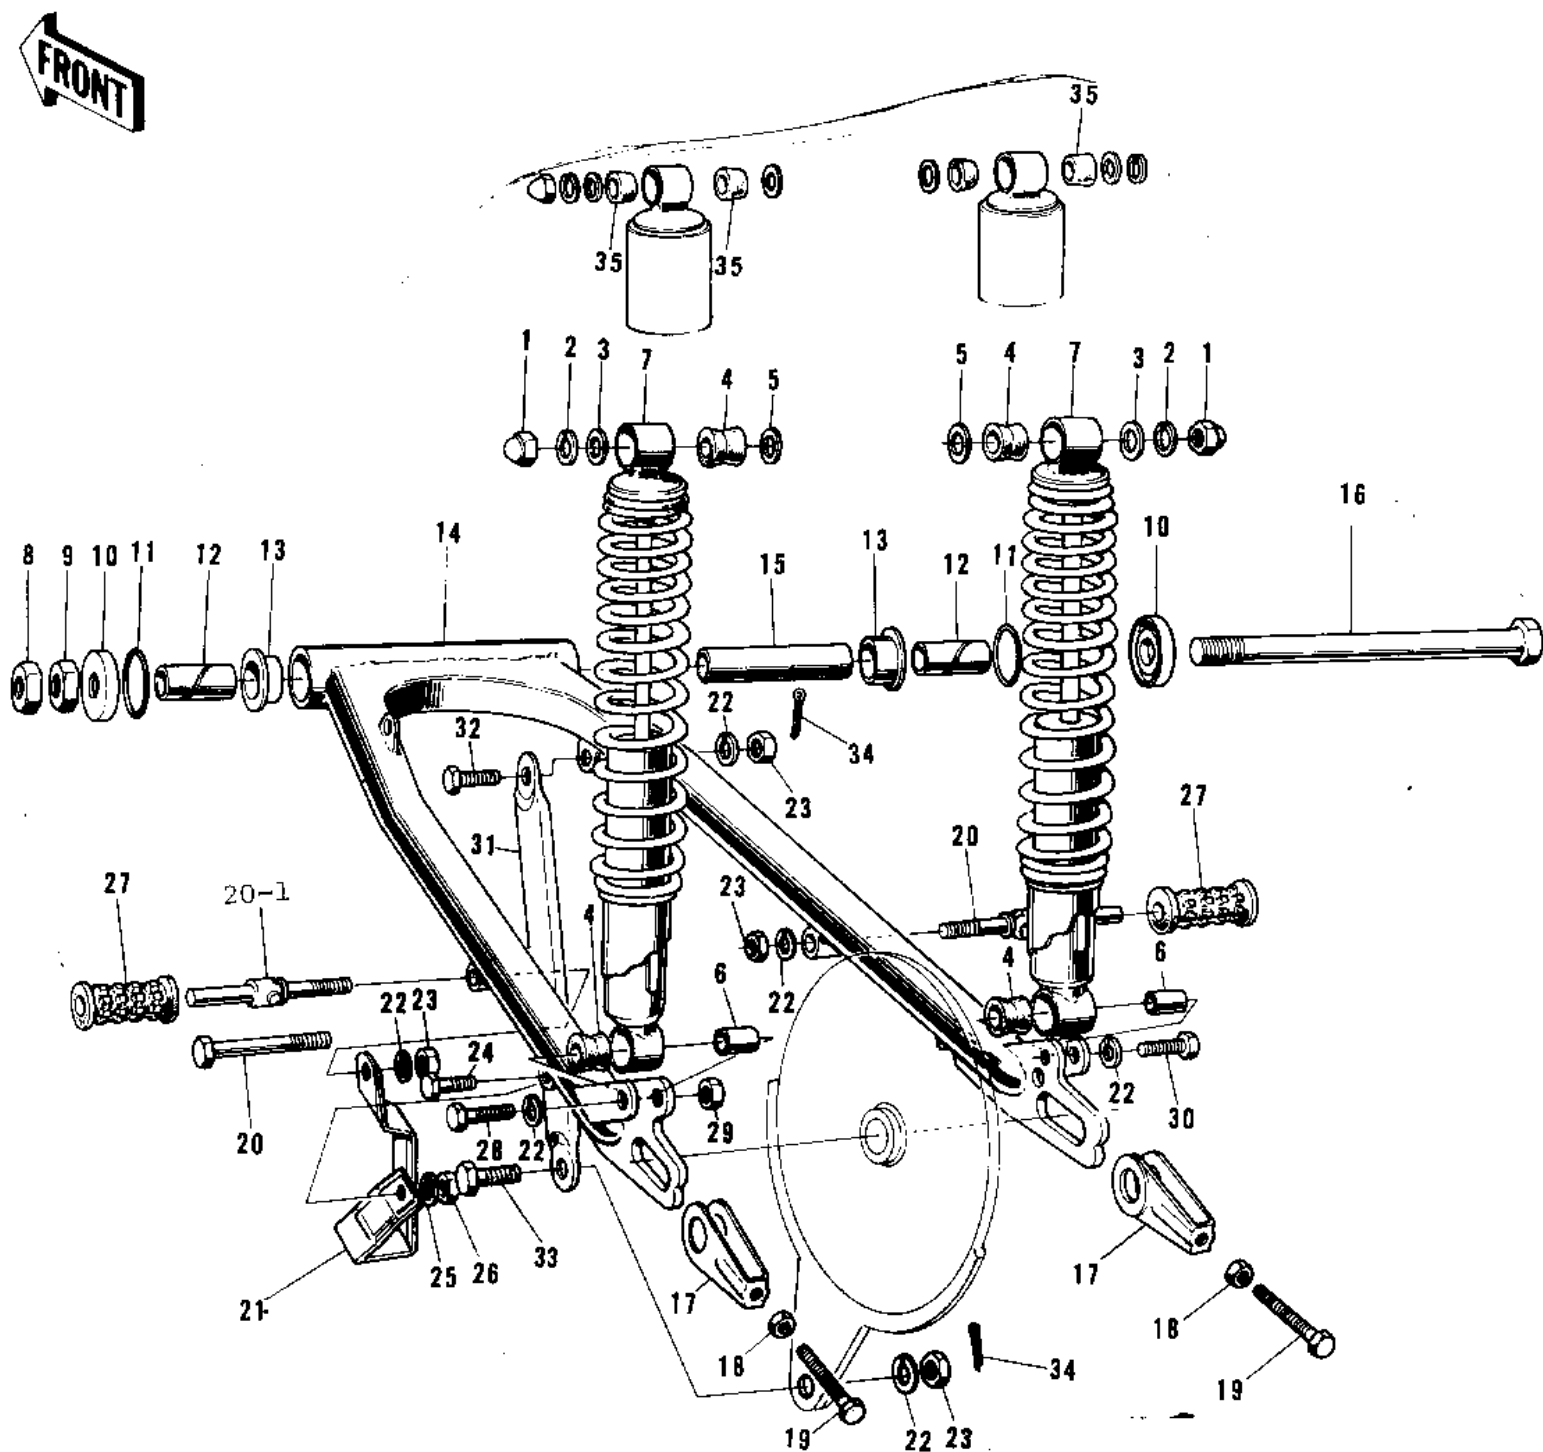

1973 F9-A

PARTS LIST

SWING ARM/SHOCK ABSORBERS ('72-'73 F9/F9

ITEM NAME	PART NUMBER	QUANTITY
NUT SHOCK ABSORBER (Ref # 1)	92020-003	
WASHER SPRING 10MM (Ref # 2)	461F1000	
WASHER-PL-10.5X26X2. (Ref # 3)	92022-044	
BUSH-SHOCK ABSORBER (Ref # 4)	45017-005	
BUSHING,RUBBER (Ref # 4)	92075-1020	
WASHER PLAIN 14MM (Ref # 5)	410B1400	
BUSH SHCK ABS PVT SF (Ref # 6)	45016-003	
SHOCK ABSBR RR (Ref # 4,6,7)	45014-069	
SHOCK ABSBR RR (Ref # 4,6,7,)	45014-076	
NUT 14MM (Ref # 8)	315B1400	
NUT,14MM (Ref # 9)	314B1400	
CAP-SWING ARM (Ref # 10)	33035-004	
"O" RING,30MM (Ref # 11)	671B2530	
SLEEVE-SWING ARM,SHR (Ref # 12)	33034-013	
BUSHING-SWING ARM (Ref # 13)	33033-009	
ARM-SWING (Ref # 14)	33001-028	
SLEEVE-SWING ARM,LON (Ref # 15)	33034-012	
SHAFT-SWING ARM PIVO (Ref # 16)	33032-025	
ADJUSTER-CHAIN (Ref # 17)	33040-043	
NUT 8MM (Ref # 18)	312B0800	
BOLT,8X50 (Ref # 19)	92001-1399	
BOLT,HEX HEAD,10X50 (Ref # 20)	92001-1254	
BAR SET-REAR FOOTRES (Ref # 20-1,2)	34030-001	
FOOTREST BAR REAR (Ref # 20-1)	34027-013	
GUARD-CHAIN (Ref # 21)	55020-009	
NUT,10MM (Ref # 23)	314B1000	
BOLT-SMALL-UPSET (Ref # 24)	115B0832	
WASHER SPRING 8MM (Ref # 25)	461F0800	
NUT,8MM (Ref # 26)	311B0800	

1973 F9-A

PARTS LIST

SWING ARM/SHOCK ABSORBERS ('72-'73 F9/F9

ITEM NAME	PART NUMBER	QUANTITY
RUBBER REAR FOOTREST (Ref # 27)	92076-008	
BOLT HEX HEAD 10X45 (Ref # 28)	113N1045	
NUT 10MM (Ref # 29)	315B1000	
BOLT HEX HEAD 10X35 (Ref # 30)	113N1035	
TORQUE LINK REAR BRK (Ref # 31)	43007-018	
BOLT TORQUE LINK FIT (Ref # 32)	92003-017	
BOLT HEX HEAD 10X25 (Ref # 33)	92003-003	
PIN COTTER 2.0X15 (Ref # 34)	550D2015	
BUSH SHCK ABS RUBBER (Ref # 35)	45017-001	