


1986 Ninja® 600

PARTS DIAGRAM SHOCK ABSORBER

Kawasaki
Let the Good Times Roll®

F2280-0011

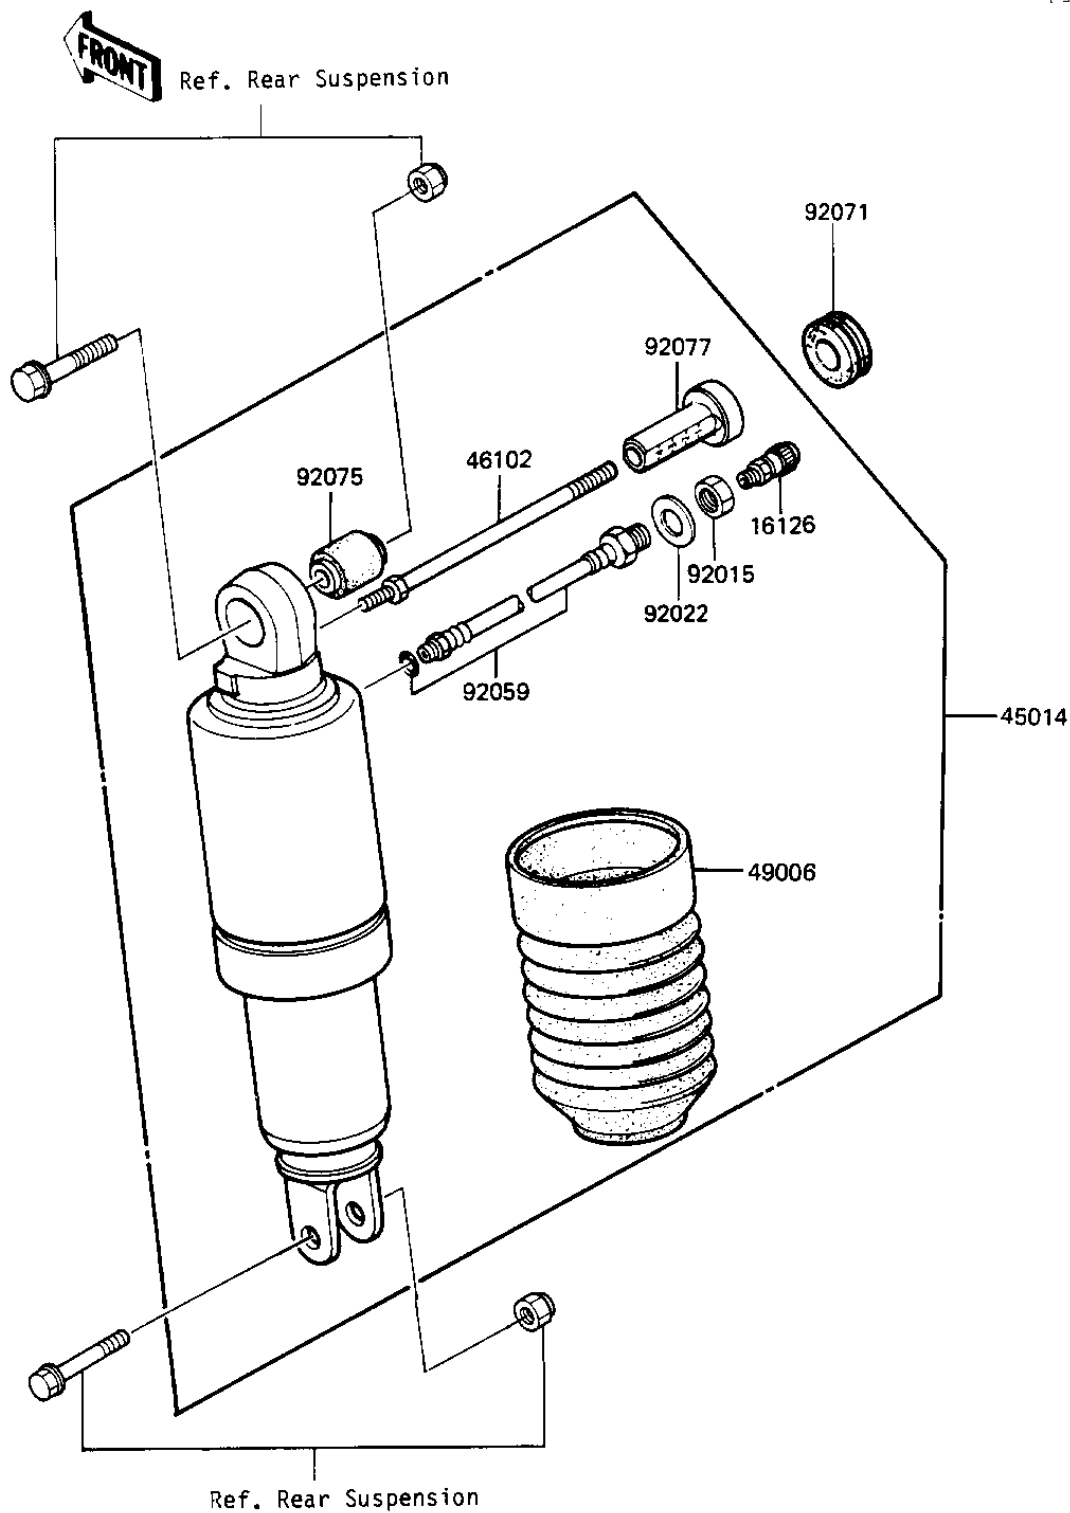

1986 Ninja[®] 600

PARTS LIST

SHOCK ABSORBER



ITEM NAME	PART NUMBER	QUANTITY
VALVE AIR (Ref # 16126)	16126-1052	1
SHOCKABSORBER (Ref # 45014)	45014-1307	1
ROD (Ref # 46102)	46102-1151	1
BOOT,RR SHOCKABSORBER (Ref # 49006)	49006-1151	1
NUT,14MM (Ref # 92015)	92015-1305	1
WASHER (Ref # 92022)	92022-1494	1
TUBE,SHOCKABSORBER (Ref # 92059)	92059-1364	1
GROMMET (Ref # 92071)	92071-056	1
DAMPER,SHOCKABSORBER (Ref # 92075)	92075-1654	1
KNOB,RR SHOCKABSORBER (Ref # 92077)	92077-1051	1