

PARTS DIAGRAM SHOCK ABSORBERS


PARTS DIAGRAM

SHOCK ABSORBERS

Kawasaki

Let the Good Times Roll®

F2151-0012

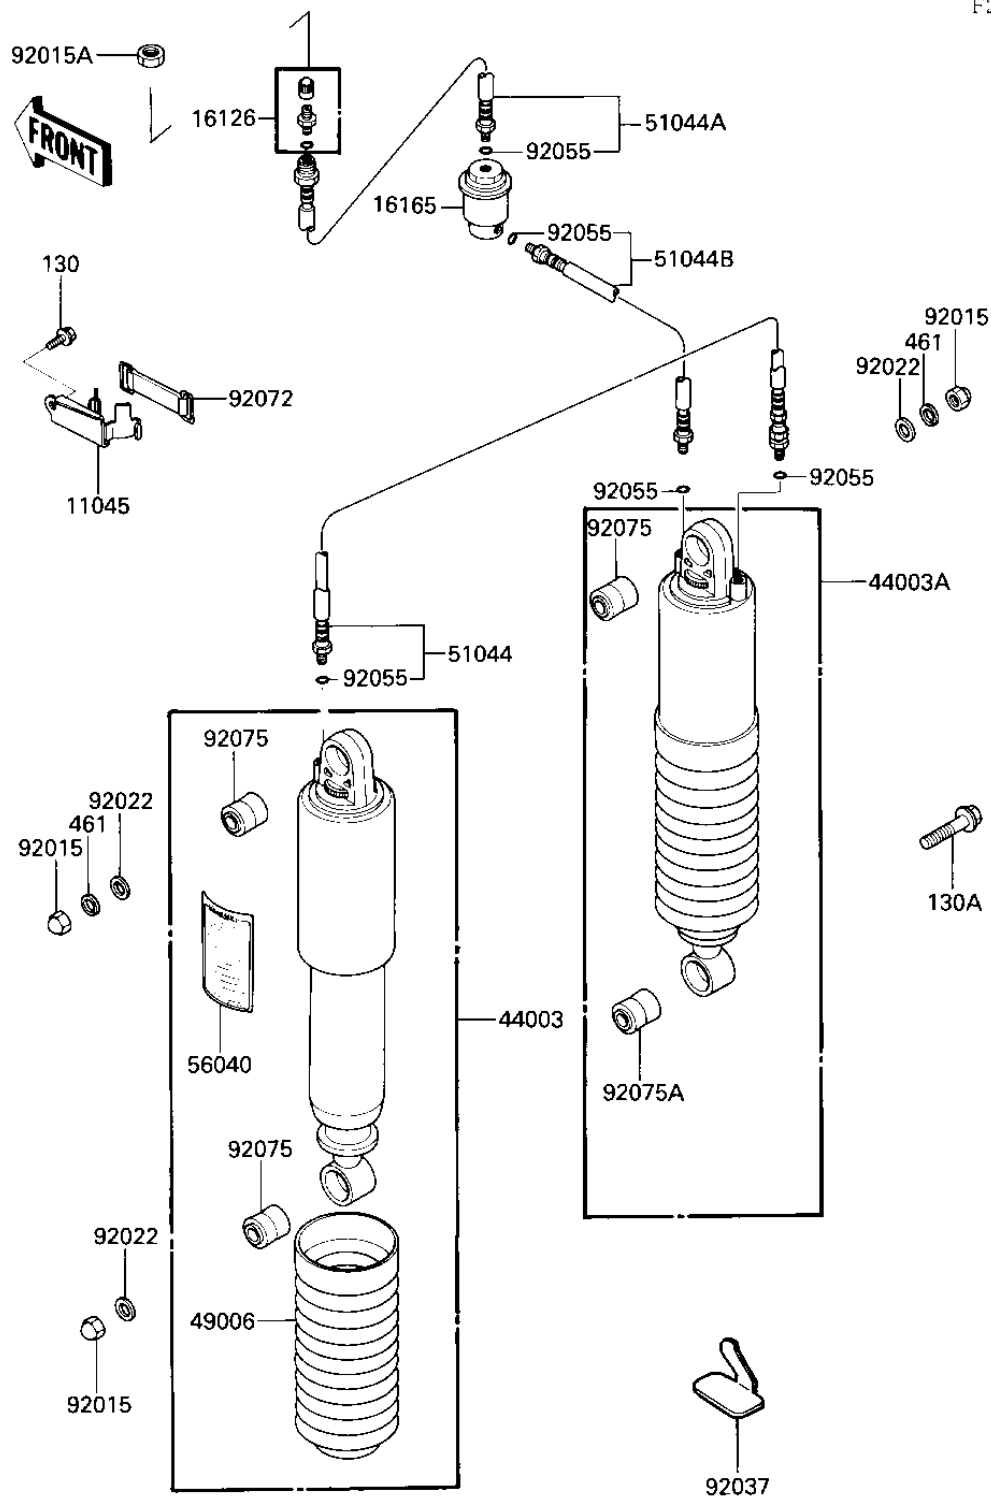

1986 Voyager XII

PARTS LIST

SHOCK ABSORBERS

ITEM NAME	PART NUMBER	QUANTITY
BRACKET (Ref # 11045)	11045-1245	1
VALVE AIR (Ref # 16126)	16126-1052	1
SEPARATOR (Ref # 16165)	16165-1056	1
DAMPER-ASSY,SHOCKABSO (Ref # 44003)	44003-1682	1
DAMPER-ASSY,SHOCKABSO (Ref # 44003A)	44003-1683	1
BOOT,SHOCKABSORBER,BL (Ref # 49006)	49006-1092	2
TUBE-ASSY,SHOCKABSORB (Ref # 51044)	51044-1079	1
TUBE-ASSY,SHOCKABSORB (Ref # 51044A)	51044-1080	1
TUBE-ASSY,SHOCKABSORB (Ref # 51044B)	51044-1081	1
LABEL-WARNING,FRONT F (Ref # 56040)	56040-1030	1
NUT,10MM (Ref # 92015)	92015-1360	3
NUT,MAIN STAND FITT (Ref # 92015A)	92016-044	1
WASHER,10.5X30X2.3,BL (Ref # 92022)	92022-1302	3
CLAMP (Ref # 92037)	92037-1820	3
"O" RING,AIR VALVE (Ref # 92055)	92055-1094	5
BAND,TOOL (Ref # 92072)	92072-066	1
BUSHING,SHOCK ABSORBE (Ref # 92075)	92075-1141	3
DAMPER,SHOCKABSORBER (Ref # 92075A)	92075-1586	1
BOLT,FLANGED,6X10 (Ref # 130)	130B0610	1
BOLT-FLANGED,10X35 (Ref # 130A)	130J1035	1
WASHER-SPRING,10MM (Ref # 461)	461K1000	2