


1980 KZ1300-A2

PARTS DIAGRAM

SHOCK ABSORBERS (KZ1300-A3)

Kawasaki
Let the Good Times Roll®

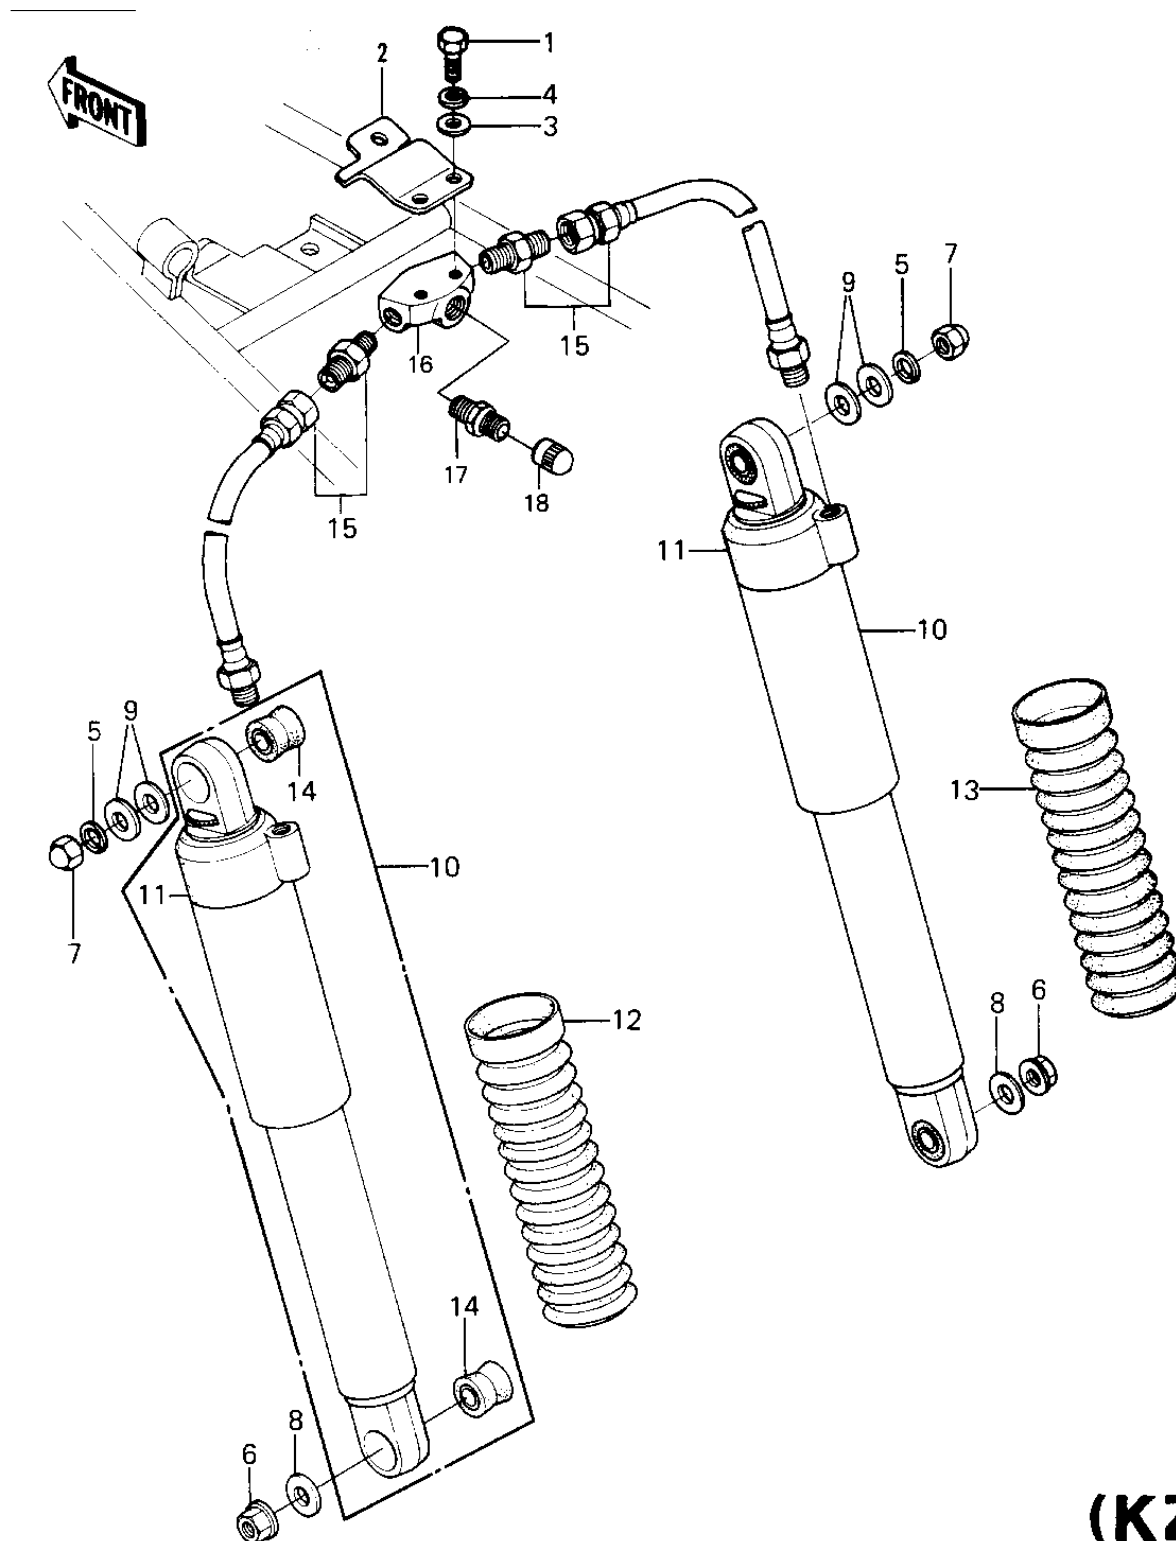

(KZ

1980 KZ1300-A2

PARTS LIST

SHOCK ABSORBERS (KZ1300-A3)

ITEM NAME	PART NUMBER	QUANTITY
BOLT-UPSET 6X14 (Ref # 1)	112B0614	1
BRACKET-SHCKBSRBR,RR (Ref # 2)	32037-1138	1
WASHER PLAIN 6MM (Ref # 3)	410B0600	1
WASHER SPRING 6MM (Ref # 4)	461F0600	1
WASHER SPRING 12MM (Ref # 5)	461F1200	1
NUT,10MM (Ref # 6)	92015-1415	1
NUT 12MM (Ref # 7)	92020-014	1
WASHER,10.5X30X2.3 (Ref # 8)	92022-1193	1
WASHER,12.4X28X2.3 (Ref # 9)	92022-1239	1
SHOCK ABSORBER,REAR (Ref # 10)	92075-1294	1
COVER,DAMPER,RR (Ref # 11)	14025-1298	1
BOOT,DAMPER (Ref # 12)	49006-1155	1
BOOT,DAMPER (Ref # 13)	49006-1155	1
BUSHING,SHOCK ABSORBE (Ref # 14)	92075-1141	1
TUBE (Ref # 15)	92059-1168	1
HOLDER-VALVE,AIR (Ref # 16)	12023-1012	1
VALVE AIR (Ref # 17)	16126-1052	1
CAP,AIR VALVE (Ref # 18)	11012-1241	1