


# 2012 VULCAN® 1700 VOYAGER®

**Kawasaki**

Let the Good Times Roll®

## PARTS DIAGRAM

### Saddlebags(Side Bag Bracket)

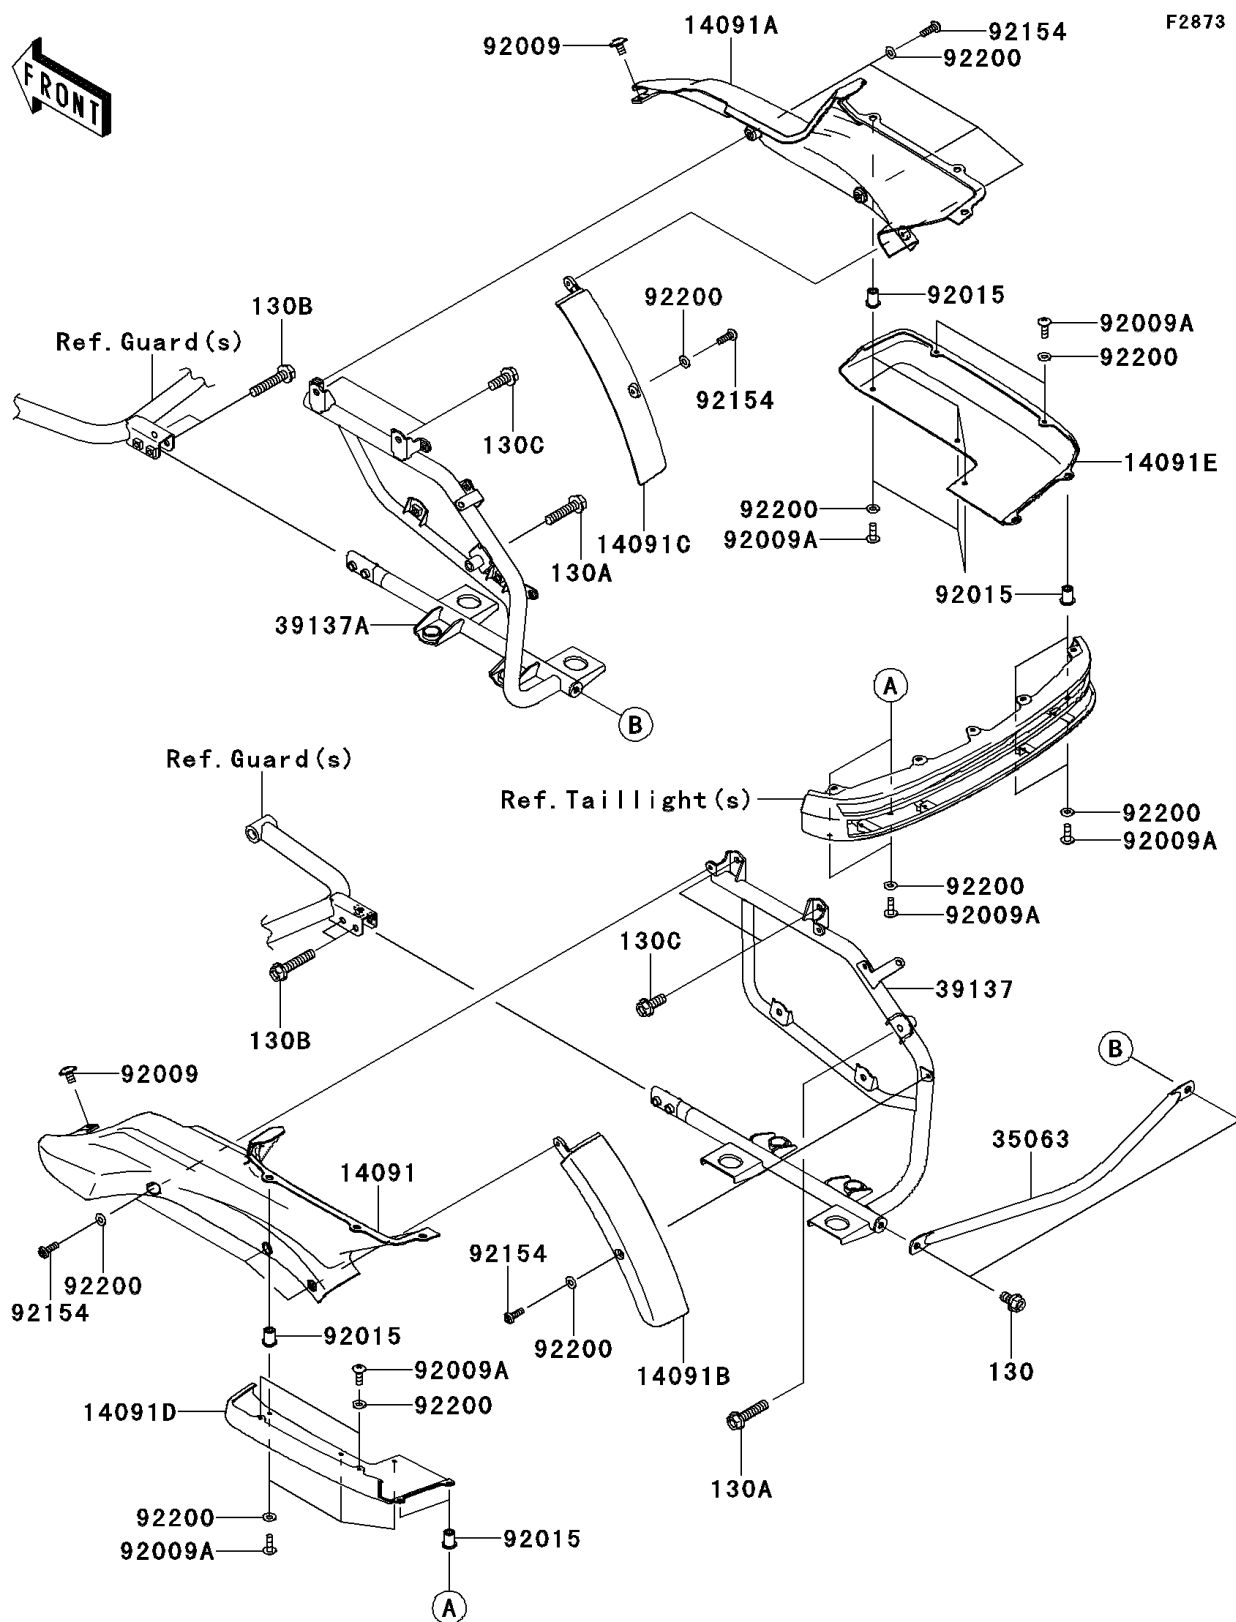

# 2012 VULCAN® 1700 VOYAGER®

## PARTS LIST

### Saddlebags(Side Bag Bracket)

| ITEM NAME                                 | PART NUMBER | QUANTITY |
|-------------------------------------------|-------------|----------|
| BOLT-FLANGED,8X14 (Ref # 130)             | 130BA0814   | 2        |
| BOLT-FLANGED,8X35 (Ref # 130A)            | 130BA0835   | 2        |
| BOLT-FLANGED,8X40 (Ref # 130B)            | 130BA0840   | 4        |
| BOLT-FLANGED,8X20 (Ref # 130C)            | 130CA0820   | 4        |
| COVER,STAY,LWR,LH (Ref # 14091)           | 14091-0950  | 1        |
| COVER,STAY,LWR,RH (Ref # 14091A)          | 14091-0951  | 1        |
| COVER,STRUT,LH (Ref # 14091B)             | 14091-0957  | 1        |
| COVER,STRUT,RH (Ref # 14091C)             | 14091-0958  | 1        |
| COVER,STAY,UPP,LH (Ref # 14091D)          | 14091-1661  | 1        |
| COVER,STAY,UPP,RH (Ref # 14091E)          | 14091-1662  | 1        |
| STAY,PANNIER (Ref # 35063)                | 35063-0537  | 1        |
| STAY-COMP,PANNIER,LH (Ref # 39137)        | 39137-0048  | 1        |
| STAY-COMP,PANNIER,RH (Ref # 39137A)       | 39137-0049  | 1        |
| SCREW,6X10,WHITE (Ref # 92009)            | 92009-1286  | 2        |
| SCREW,5X16,WHITE (Ref # 92009A)           | 92009-1464  | 14       |
| NUT,WELL,5MM (Ref # 92015)                | 92015-1757  | 10       |
| BOLT,SOCKET,5X16 (Ref # 92154)            | 92154-0287  | 8        |
| WASHER,NATURAL,5.3X11.5X1.0 (Ref # 92200) | 92200-0538  | 22       |