


2011 VULCAN® 1700 VOYAGER® ABS


PARTS DIAGRAM

Fenders

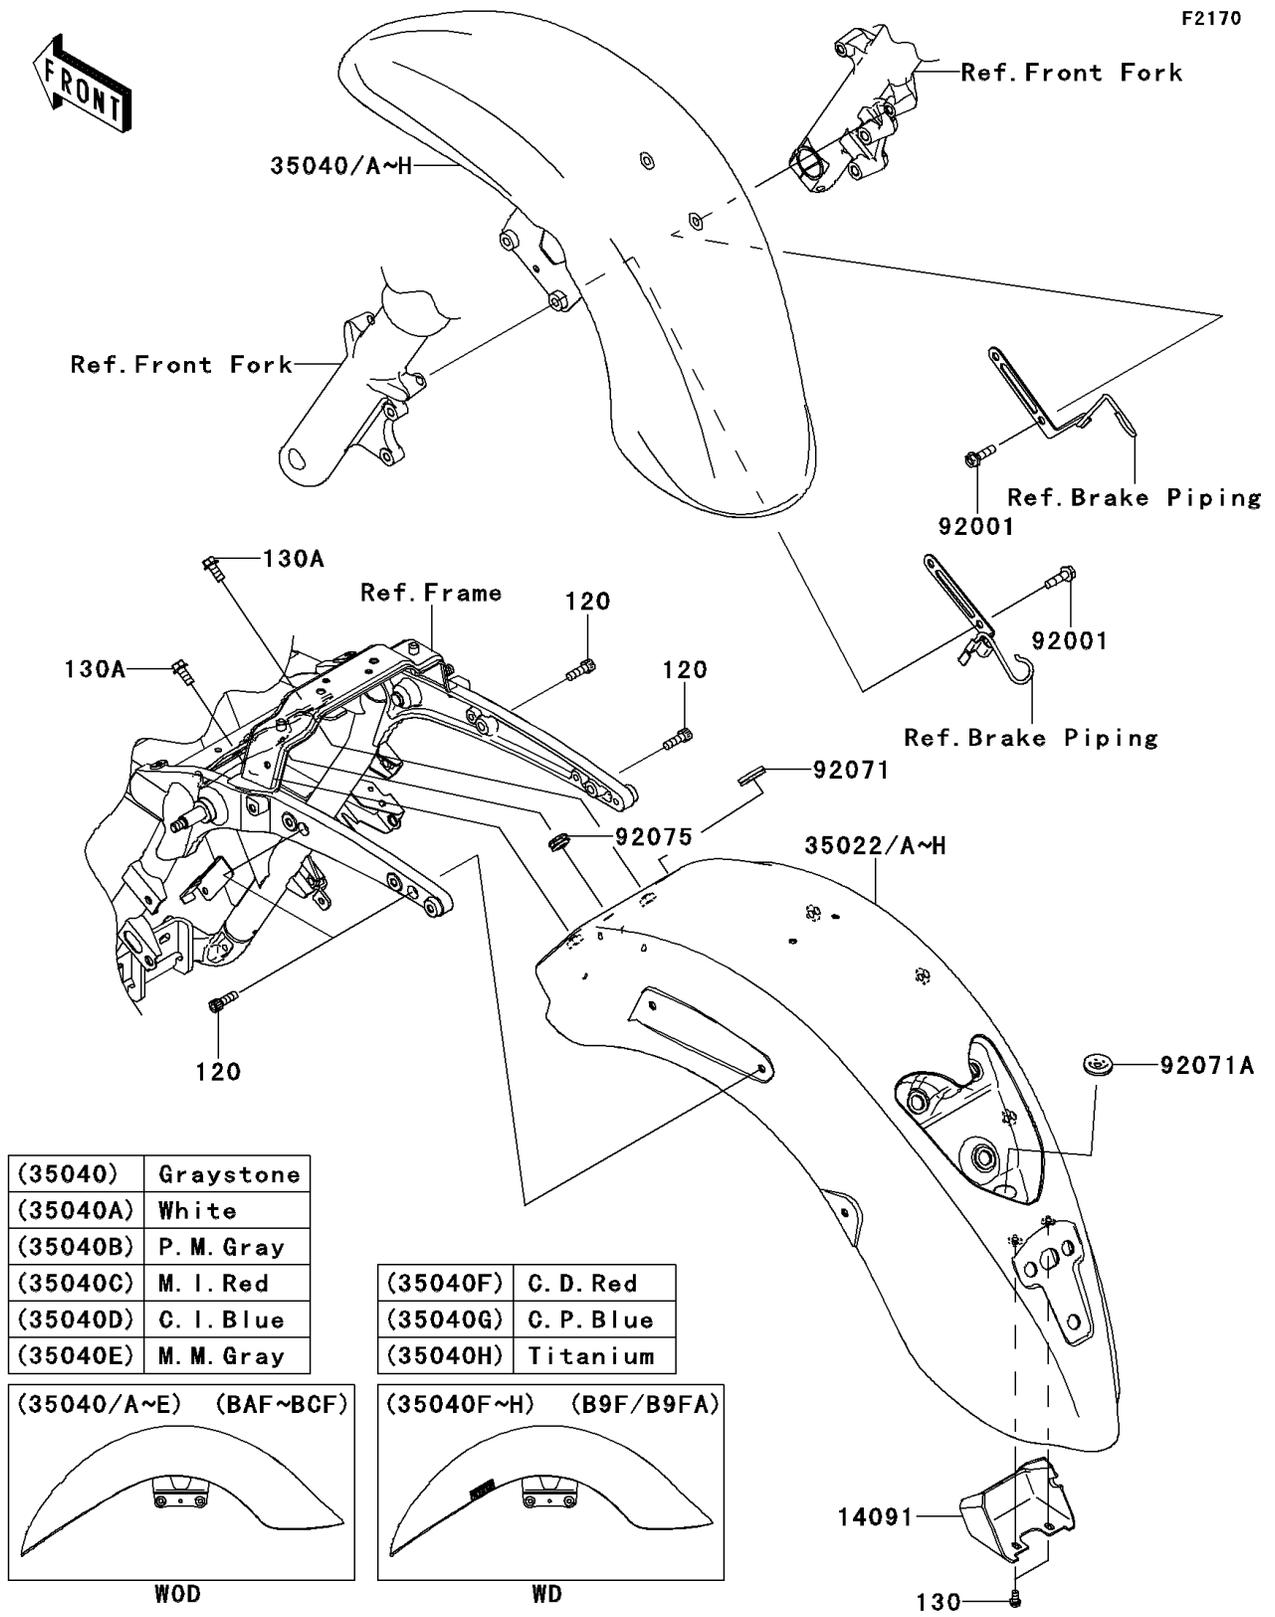


(35040)	Graystone
(35040A)	White
(35040B)	P. M. Gray
(35040C)	M. I. Red
(35040D)	C. I. Blue
(35040E)	M. M. Gray

(35040F)	C. D. Red
(35040G)	C. P. Blue
(35040H)	Titanium

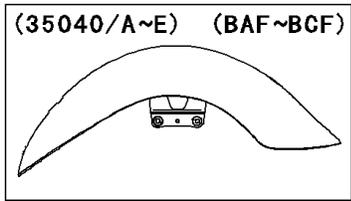

WOD

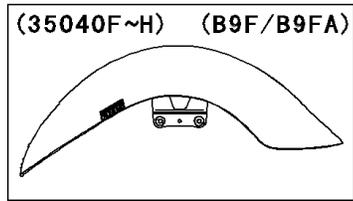

WD

2011 VULCAN® 1700 VOYAGER® ABS

Kawasaki
Let the Good Times Roll®

PARTS LIST

Fenders

ITEM NAME	PART NUMBER	QUANTITY
BOLT-SOCKET,8X25 (Ref # 120)	120CA0825	4
BOLT-FLANGED,6X12 (Ref # 130)	130BA0612	2
BOLT-FLANGED,8X16 (Ref # 130A)	130BA0816	2
COVER,HARNESS CONNECTOR (Ref # 14091)	14091-1630	1
FENDER-COMP-REAR,P.M.GRAY (Ref # 35022B)	35022-0066-10H	1
FENDER-COMP-FRONT,P.M.GRAY (Ref # 35040B)	35040-0017-10H	1
BOLT,FLANGED,8X28 (Ref # 92001)	92001-1095	4
GROMMET (Ref # 92071)	92071-1228	1
GROMMET (Ref # 92071A)	92071-1265	1
DAMPER (Ref # 92075)	92075-1067	1
FENDER-COMP-REAR,C.I.BLUE (Ref # 35022E)	35022-0066-25U	1
FENDER-COMP-FRONT,C.I.BLUE (Ref # 35040D)	35040-0017-25U	1