


Front Fork

Let the Good Times Roll®



Diagram illustrating the assembly of a shock absorber, showing the main components and their assembly sequence:

- 11012A**: Top cap or dust boot.
- 11012**: Top nut or washer.
- 92055**: O-ring or seal.
- 44013/A**: Upper shock absorber tube or sleeve.
- 44026**: Spring or coil.
- 92093**: Lower nut or washer.
- 92033**: Lower O-ring or seal.
- 92022A**: Lower O-ring or seal.
- 92049**: Lower nut or washer.
- 44005**: Lower shock absorber tube or sleeve.
- 44006**: Lower shock absorber tube or sleeve.
- 44065**: Lower cap or dust boot.

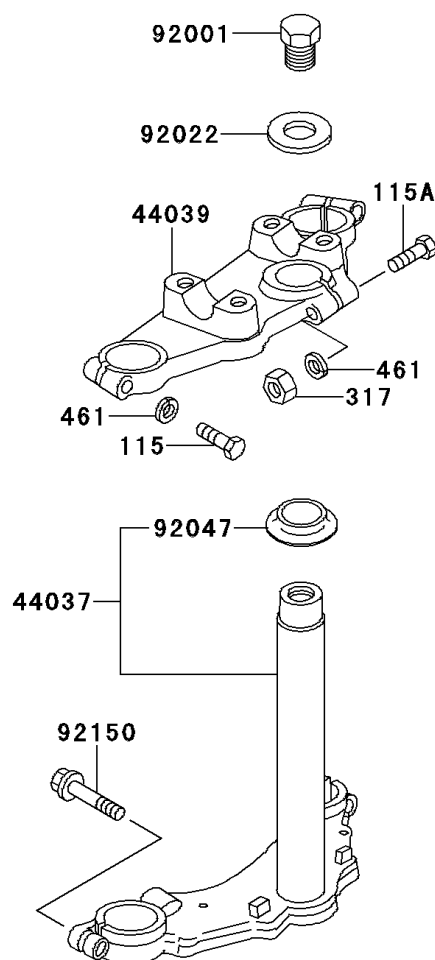

1998 KE100

PARTS LIST

Front Fork



ITEM NAME	PART NUMBER	QUANTITY
-----------	-------------	----------