


# 2013 VULCAN® 1700 VOYAGER® ABS

## PARTS DIAGRAM

### Fenders

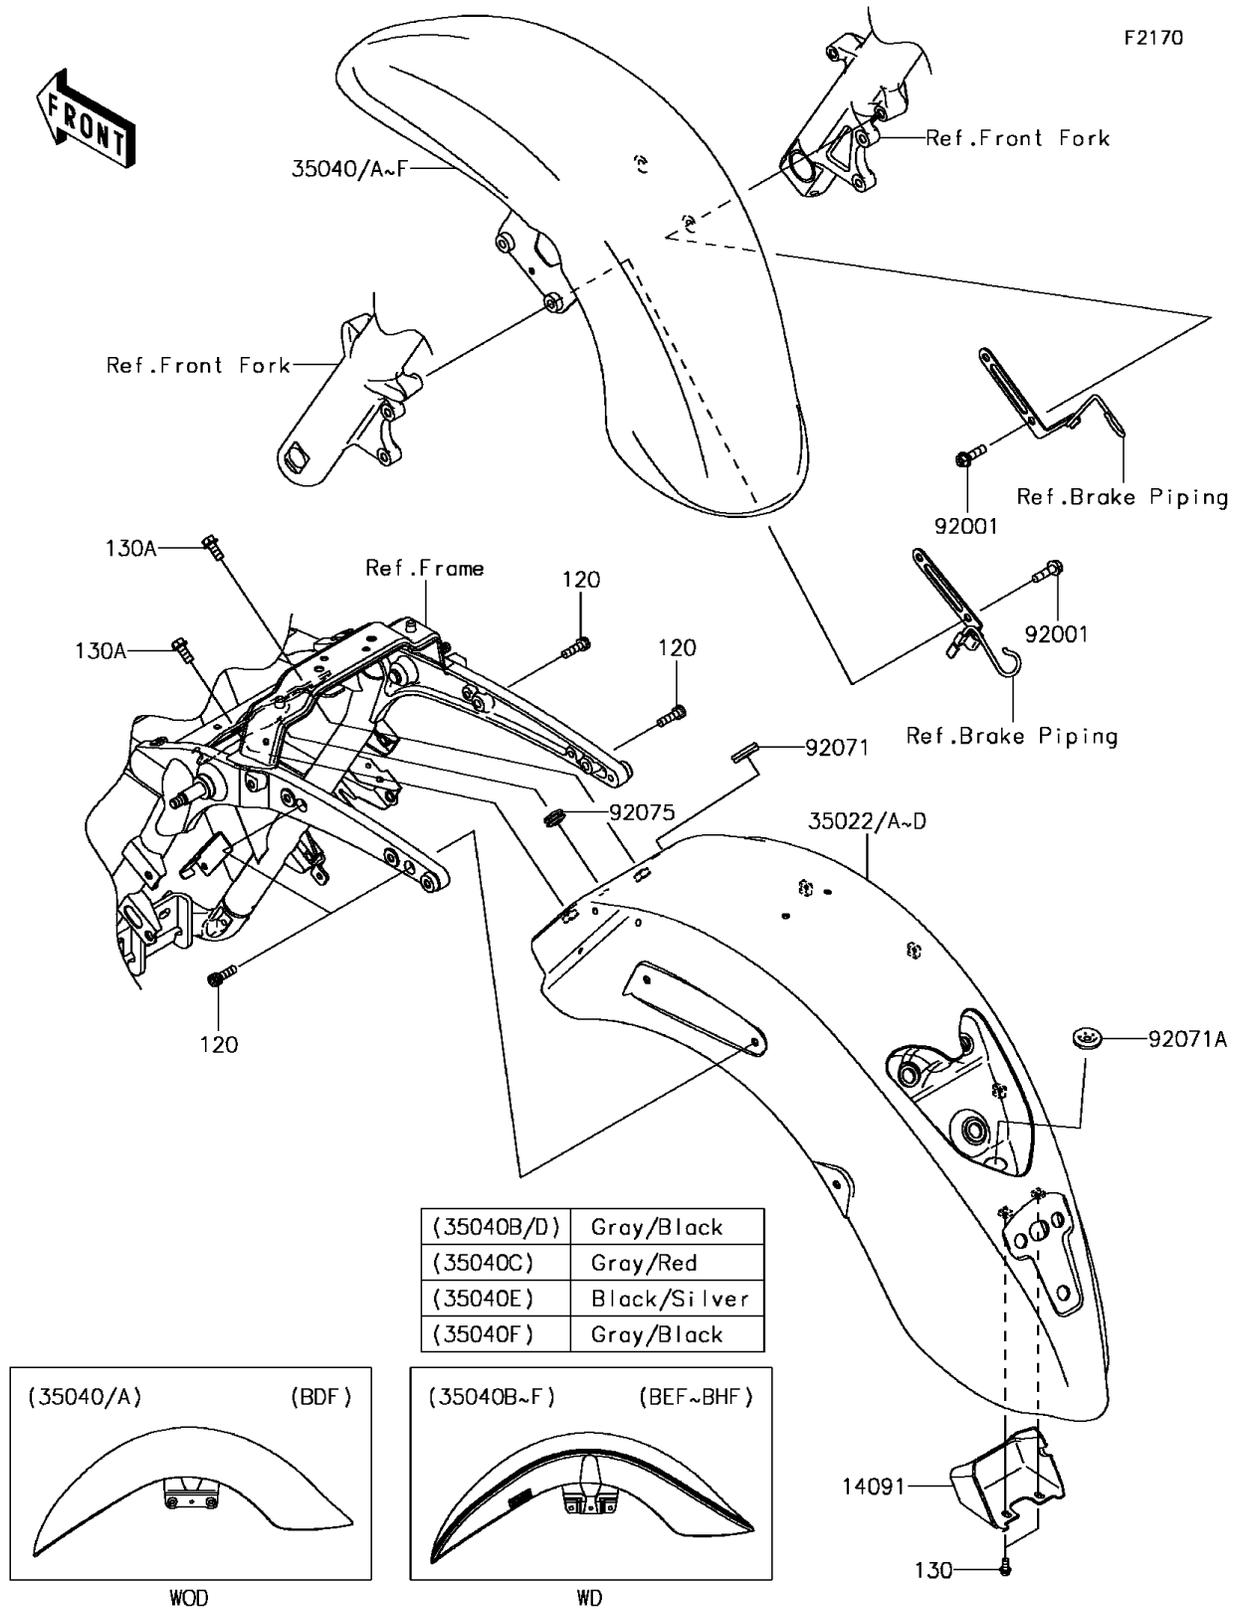

# 2013 VULCAN® 1700 VOYAGER® ABS

**Kawasaki**  
Let the Good Times Roll®

## PARTS LIST

### Fenders

ITEM NAME	PART NUMBER	QUANTITY
BOLT-SOCKET,8X25 (Ref # 120)	120CA0825	4
BOLT-FLANGED,6X12 (Ref # 130)	130BA0612	2
BOLT-FLANGED,8X16 (Ref # 130A)	130BA0816	2
COVER,HARNESS CONNECTOR (Ref # 14091)	14091-1630	1
FENDER-COMP-REAR,P.C.WHITE (Ref # 35022B)	35022-0066-667	1
FENDER-COMP-REAR,BLACK (Ref # 35022D)	35022-0066-B5	1
FENDER-COMP-FRONT,P.C.WHITE (Ref # 35040)	35040-0017-667	1
FENDER-COMP-FRONT,BLACK (Ref # 35040A)	35040-0017-B5	1
BOLT,FLANGED,8X28 (Ref # 92001)	92001-1095	4
GROMMET (Ref # 92071)	92071-1228	1
GROMMET (Ref # 92071A)	92071-1265	1
DAMPER (Ref # 92075)	92075-1067	1