


2014 NINJA® 1000 ABS

PARTS DIAGRAM

Cowling(Center)

Kawasaki

Let the Good Times Roll®

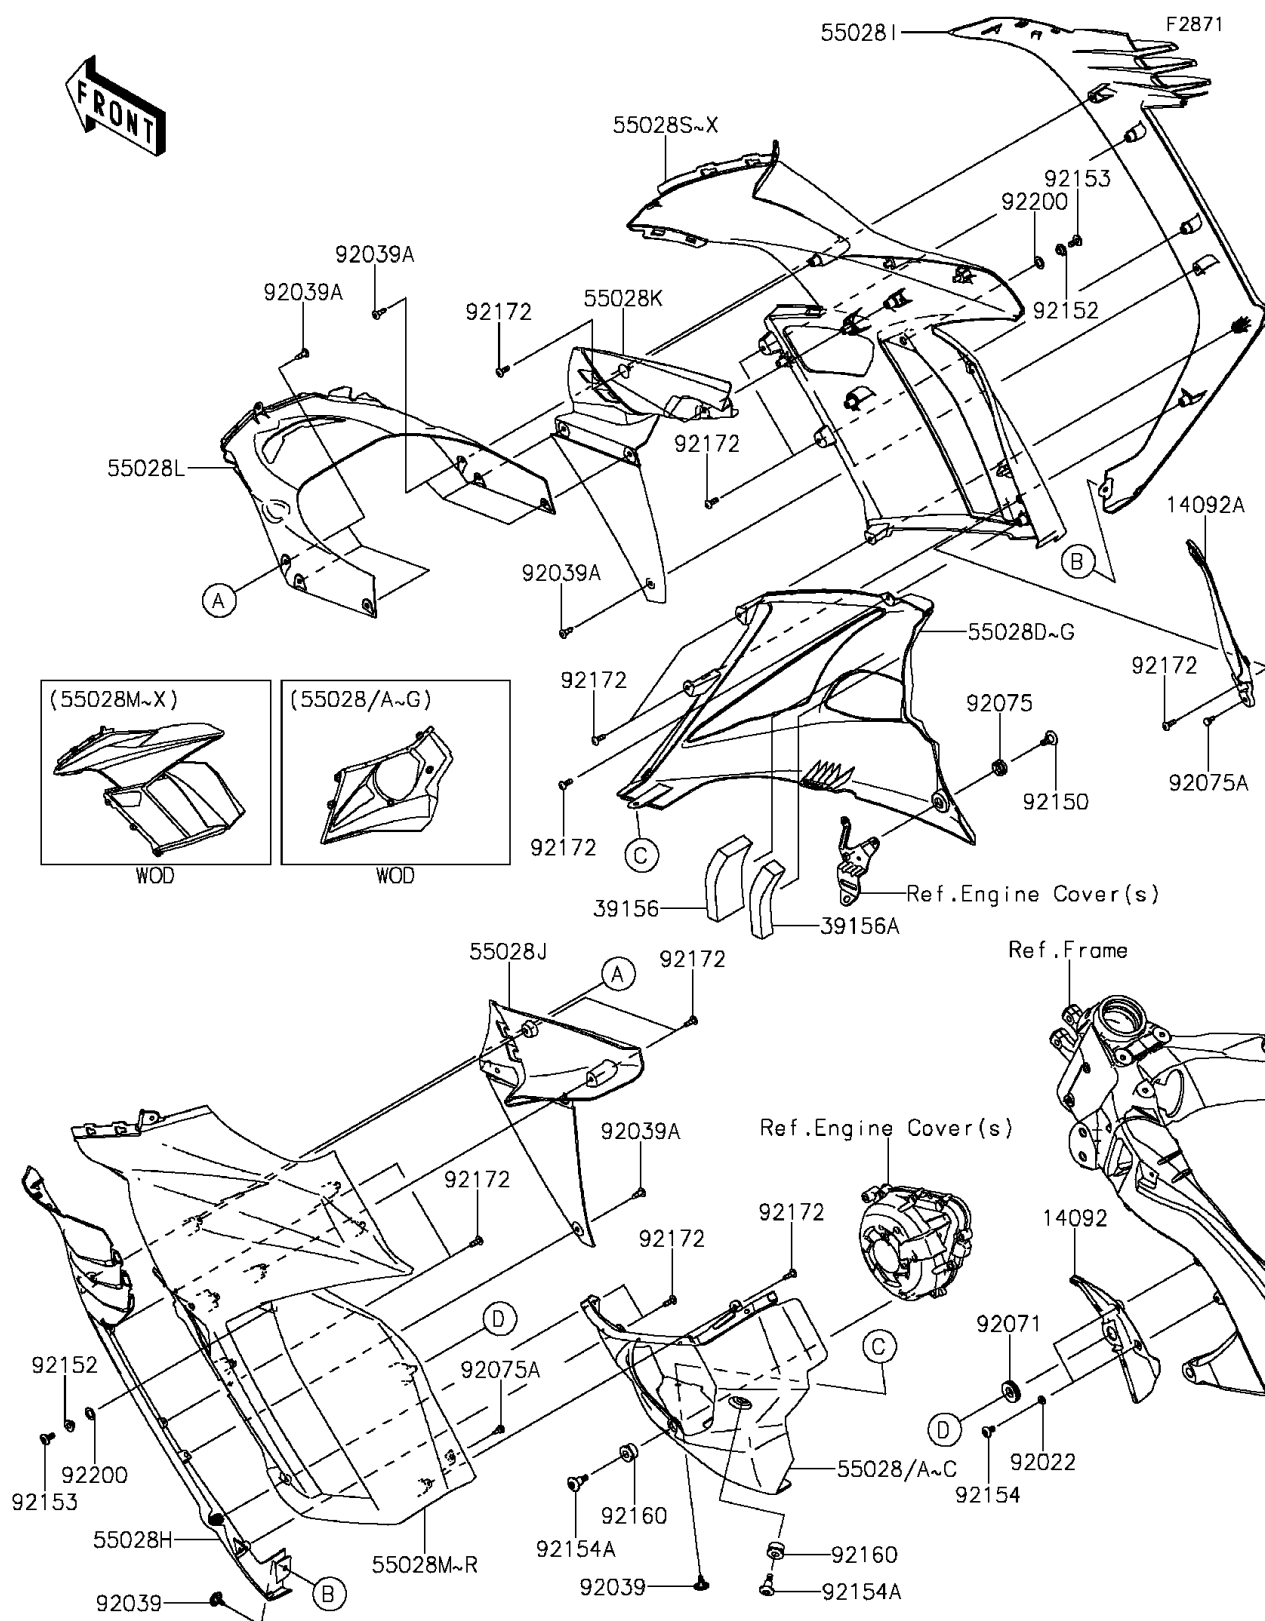

2014 NINJA® 1000 ABS

PARTS LIST

Cowling(Center)

ITEM NAME	PART NUMBER	QUANTITY
COVER,LH (Ref # 14092)	14092-0250	1
COVER,RH (Ref # 14092A)	14092-0251	1
PAD,20X120X50 (Ref # 39156)	39156-0708	1
PAD,20X140X15 (Ref # 39156A)	39156-0736	1
COWLING,LWR,LH,M.S.BLACK (Ref # 55028B)	55028-0346-660	1
COWLING,LWR,LH,M.F.S.BLACK (Ref # 55028C)	55028-0346-739	1
COWLING,LWR,RH,M.S.BLACK (Ref # 55028F)	55028-0347-660	1
COWLING,LWR,RH,M.F.S.BLACK (Ref # 55028G)	55028-0347-739	1
COWLING,SLAT,LH,F.BLACK (Ref # 55028H)	55028-0348-6Z	1
COWLING,SLAT,RH,F.BLACK (Ref # 55028I)	55028-0349-6Z	1
COWLING,INNER,LH (Ref # 55028J)	55028-0350	1
COWLING,INNER,RH (Ref # 55028K)	55028-0351	1
COWLING,FR (Ref # 55028L)	55028-0352	1
COWLING,SIDE,LH,C.L.GREEN (Ref # 55028M)	55028-0386-17P	1
COWLING,SIDE,LH,C.C.BLUE (Ref # 55028N)	55028-0386-46M	1
COWLING,SIDE,RH,C.L.GREEN (Ref # 55028S)	55028-0387-17P	1
COWLING,SIDE,RH,C.C.BLUE (Ref # 55028T)	55028-0387-46M	1
WASHER,NYLON,5.3X11.5X1.5 (Ref # 92022)	92022-1521	2
RIVET,HOLE 8MM (Ref # 92039)	92039-0014	2
RIVET (Ref # 92039A)	92039-0068	8
GROMMET (Ref # 92071)	92071-1043	1
DAMPER (Ref # 92075)	92075-1634	1
DAMPER,6X10X15 (Ref # 92075A)	92075-1808	2
BOLT,SOCKET,6MM (Ref # 92150)	92150-1154	1
COLLAR,6.5X10X6.2 (Ref # 92152)	92152-1511	2
BOLT,SOCKET,6X14 (Ref # 92153)	92153-1021	2
BOLT,SOCKET,5X16 (Ref # 92154)	92154-0026	2
BOLT,6X24 (Ref # 92154A)	92154-0348	2
DAMPER (Ref # 92160)	92160-1141	2

2014 NINJA® 1000 ABS

PARTS LIST

Cowling(Center)

ITEM NAME	PART NUMBER	QUANTITY
SCREW,TAPPING,5X16 (Ref # 92172)	92172-0238	15
WASHER,10.3X17X1 (Ref # 92200)	92200-0380	2