

1990 Mojave 250


PARTS DIAGRAM

Front Fender

Kawasaki

Let the Good Times Roll®

F 2171

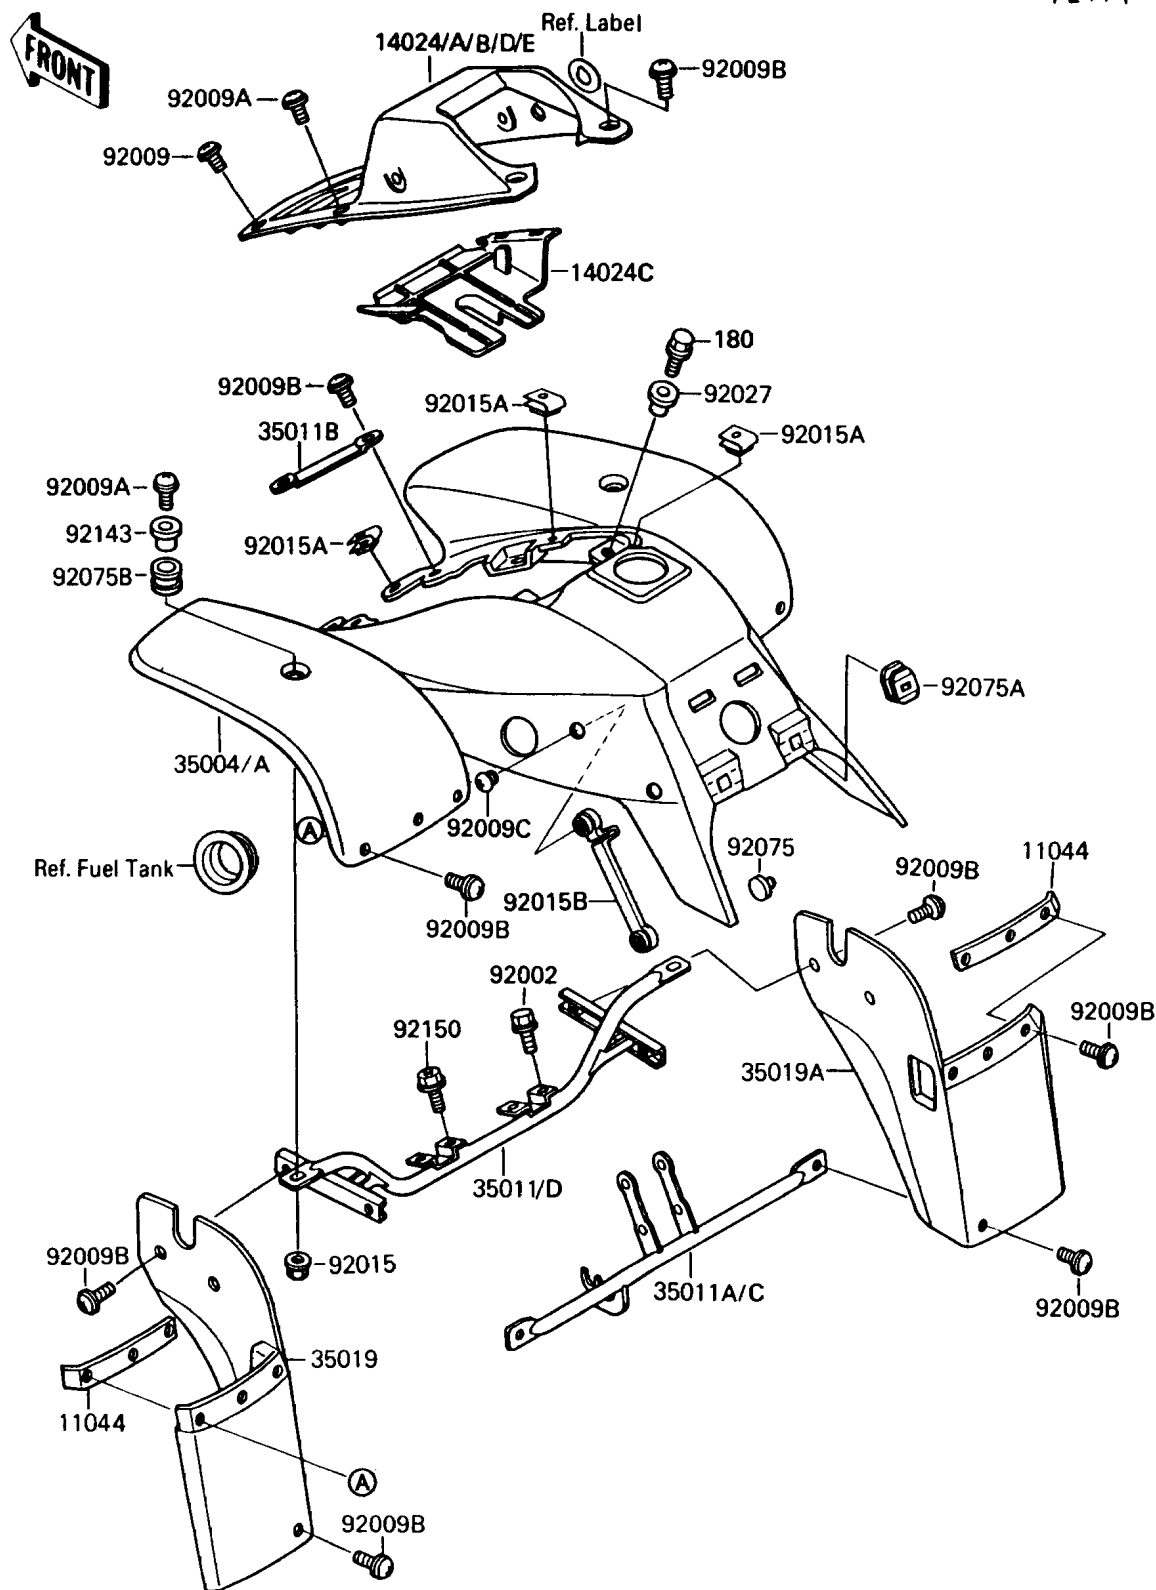

1990 Mojave 250

PARTS LIST

Front Fender

ITEM NAME	PART NUMBER	QUANTITY
BRACKET,FLAP (Ref # 11044)	11044-1934	2
COVER,FRONT FENDER,P.WHITE (Ref # 14024A)	14024-1268-6F	1
COVER,FRONT FENDER,F.RED (Ref # 14024B)	14024-1268-6L	1
COVER,FRONT FENDER,INNER (Ref # 14024C)	14024-1297	1
FENDER-FRONT,P.WHITE (Ref # 35004)	35004-1192-6F	1
FENDER-FRONT,F.RED (Ref # 35004A)	35004-1192-6L	1
STAY,FRONT FENDER (Ref # 35011)	35011-1305	1
STAY,FLAP (Ref # 35011A)	35011-1308	1
STAY,FRONT FENDER (Ref # 35011B)	35011-1324	1
FLAP,LH (Ref # 35019)	35019-1172	1
FLAP,RH (Ref # 35019A)	35019-1173	1
BOLT (Ref # 92002)	92002-1626	3
SCREW,6X18,BLACK (Ref # 92009)	92009-1181	2
SCREW,6X22,BLACK (Ref # 92009A)	92009-1256	4
SCREW,6X14 (Ref # 92009B)	92009-1288	16
SCREW,16MM (Ref # 92009C)	92009-1508	2
NUT,FLANGED,6MM,BLACK (Ref # 92015)	92015-1237	2
NUT,CLAMP,6MM (Ref # 92015A)	92015-1678	6
NUT (Ref # 92015B)	92015-1701	1
COLLAR,L=5.6 (Ref # 92027)	92027-1933	1
DAMPER,DUAL SEAT (Ref # 92075)	92075-023	1
DAMPER (Ref # 92075A)	92075-1834	2
DAMPER,CASE (Ref # 92075B)	92075-222	2
COLLAR,L=9.6 (Ref # 92143)	92143-1016	2
BOLT,FLANGED,6X16 (Ref # 92150)	92150-1358	1
BOLT-UPSET-WS,6X35 (Ref # 180)	180D0635	2