


2019 Z900

PARTS DIAGRAM

Suspension/Shock Absorber

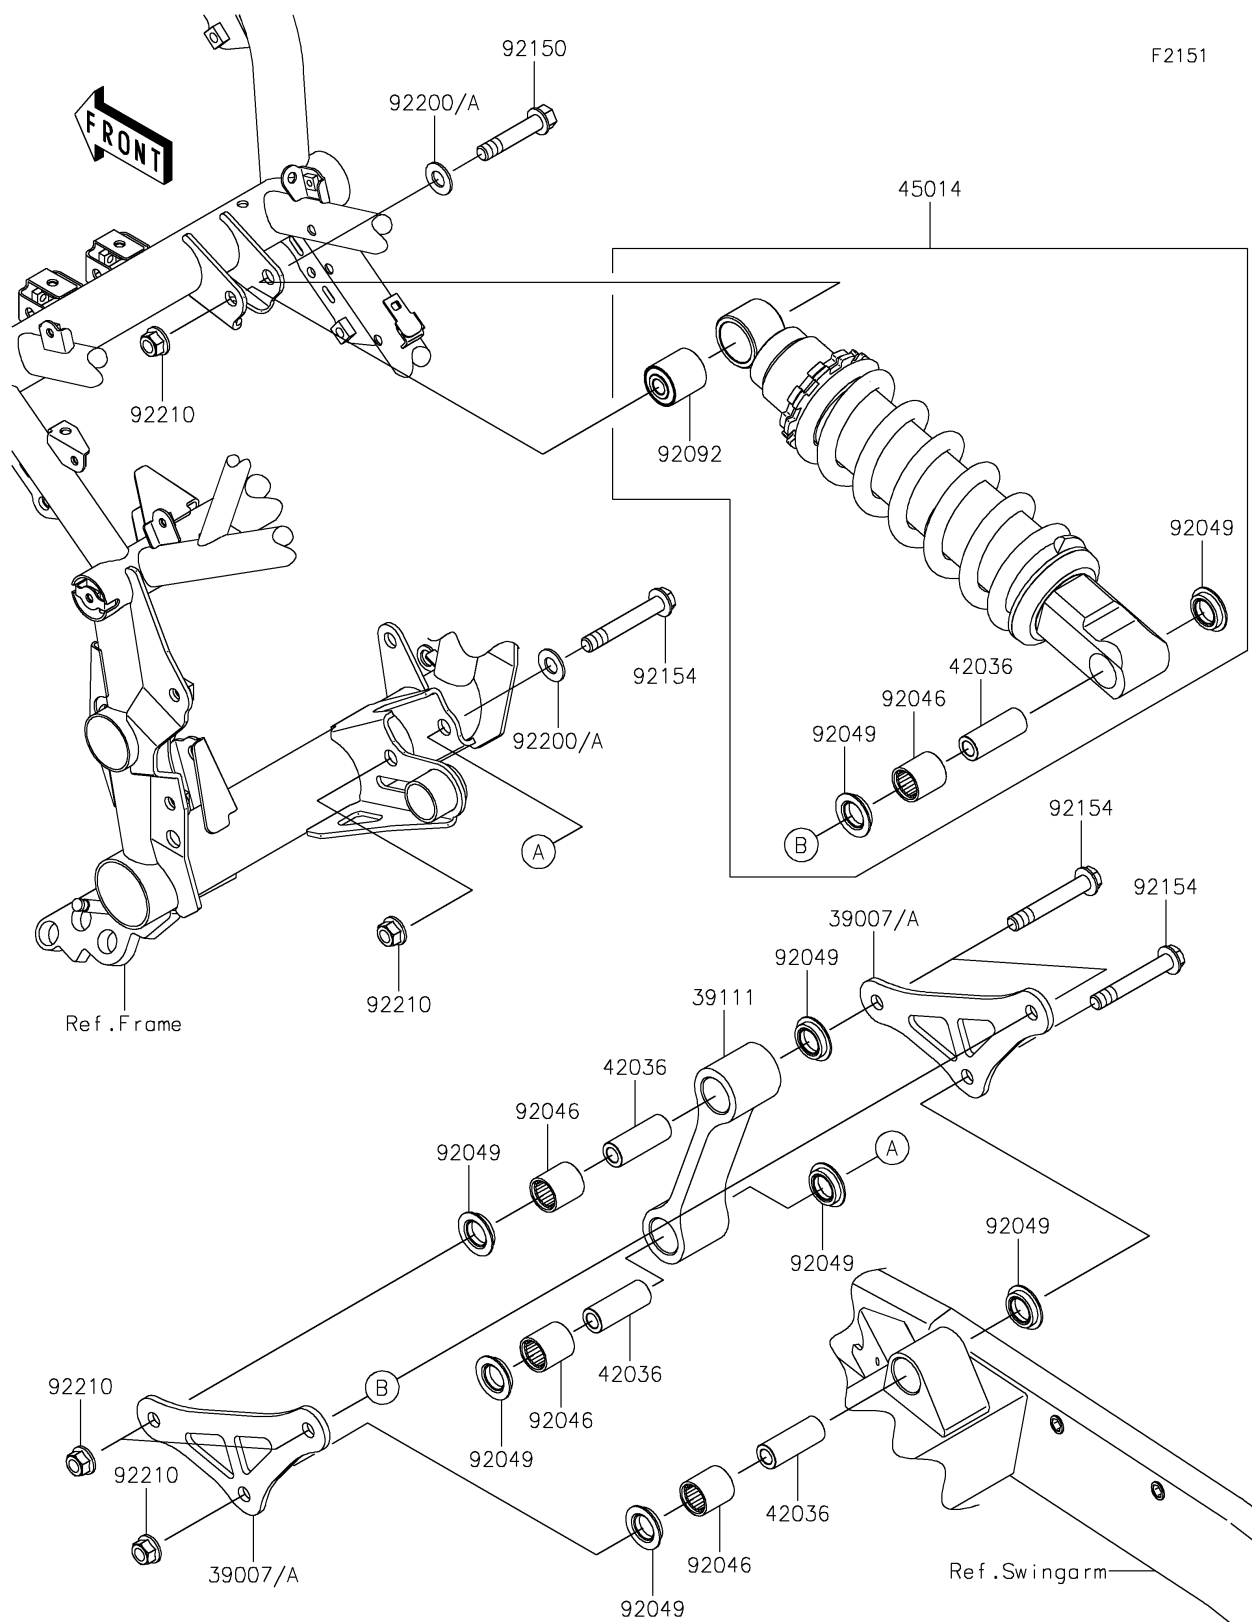

2019 Z900

PARTS LIST

Suspension/Shock Absorber

ITEM NAME	PART NUMBER	QUANTITY
ARM-SUSP (Ref # 39007A)	39007-0410	2
ROD-TIE (Ref # 39111)	39111-0311	1
SLEEVE,10.1X17X44.5 (Ref # 42036)	42036-1342	4
SHOCKABSORBER,F.BLACK (Ref # 45014)	45014-0569-21	1
BEARING-NEEDLE,SFYZM172425 (Ref # 92046)	92046-1273	4
SEAL-OIL,MHA17245.7F (Ref # 92049)	92049-1223	8
BUSHING-RUBBER (Ref # 92092)	92092-1058	1
BOLT,FLANGED,10X50 (Ref # 92150)	92150-1125	1
BOLT,FLANGED,10X66 (Ref # 92154)	92154-2204	4
WASHER,11X22X1.6 (Ref # 92200A)	92200-1926	2
NUT,LOCK,FLANGED,10MM (Ref # 92210)	92210-1139	5