


# 1999 Prairie 400

## PARTS DIAGRAM

### Shock Absorber(s)

F2280

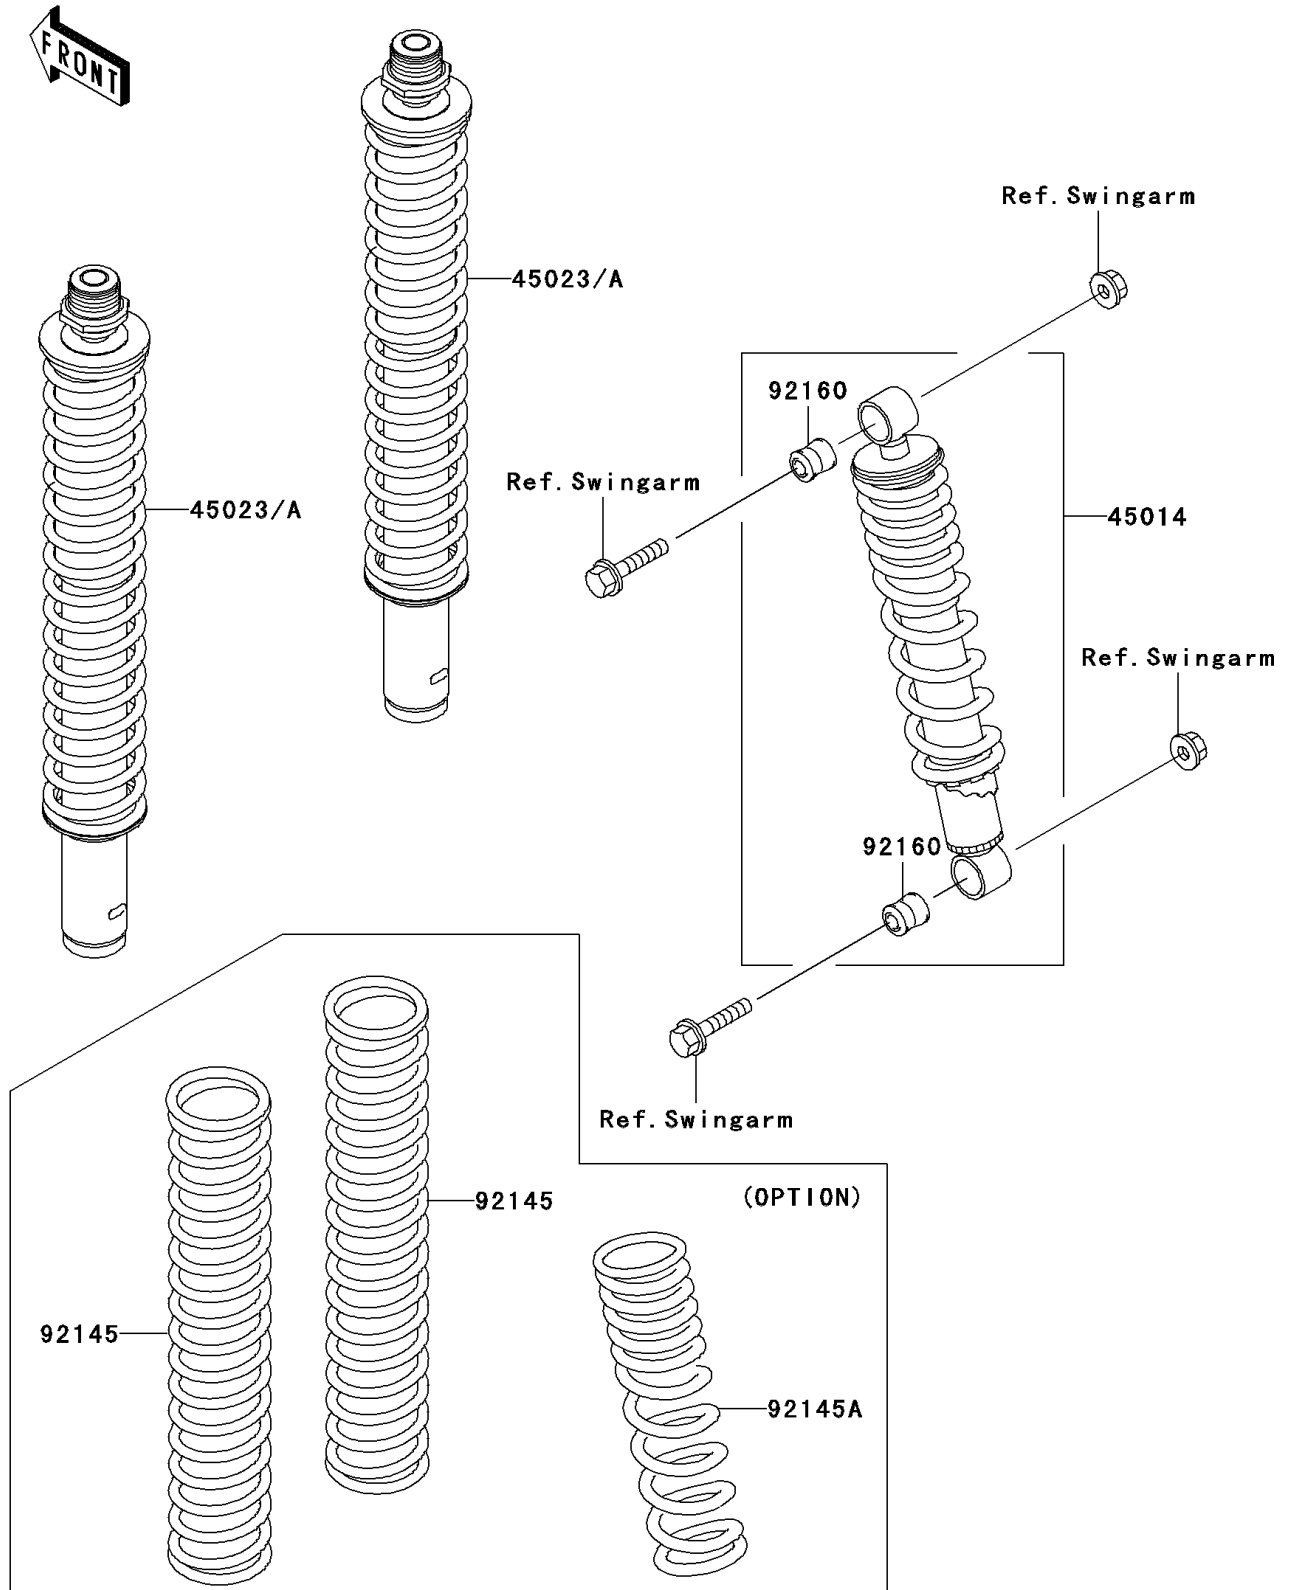

# 1999 Prairie 400

## PARTS LIST

### Shock Absorber(s)

**ITEM NAME**

**PART NUMBER**

**QUANTITY**

---