


# 2009 Brute Force 650 4x4i Hardwoods Green HD

## PARTS DIAGRAM

### Shock Absorber(s)

F2280

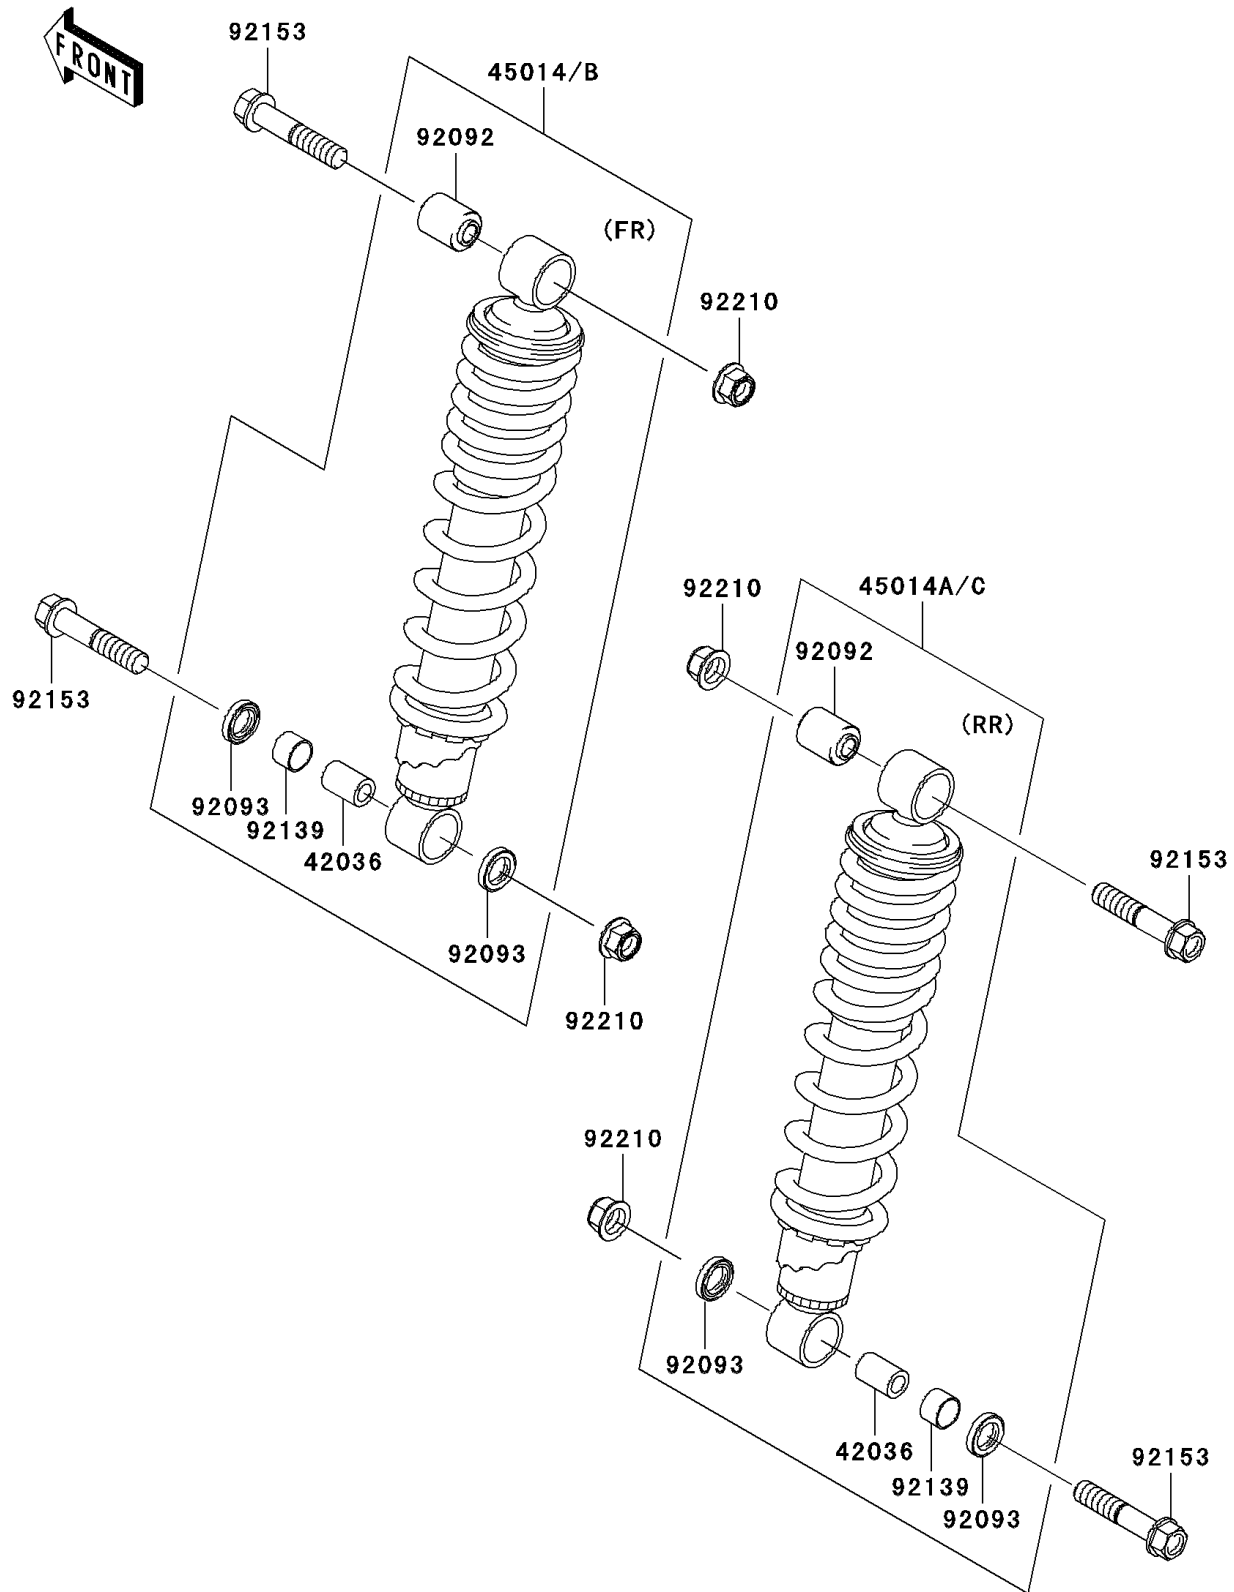

# 2009 Brute Force 650 4x4i Hardwoods Green HD



## PARTS LIST

### Shock Absorber(s)

ITEM NAME	PART NUMBER	QUANTITY
-----------	-------------	----------

---