


2009 Brute Force 650 4x4i Hardwoods Green HD

Kawasaki
Let the Good Times Roll®

PARTS DIAGRAM

Shock Absorber(s)

F2280

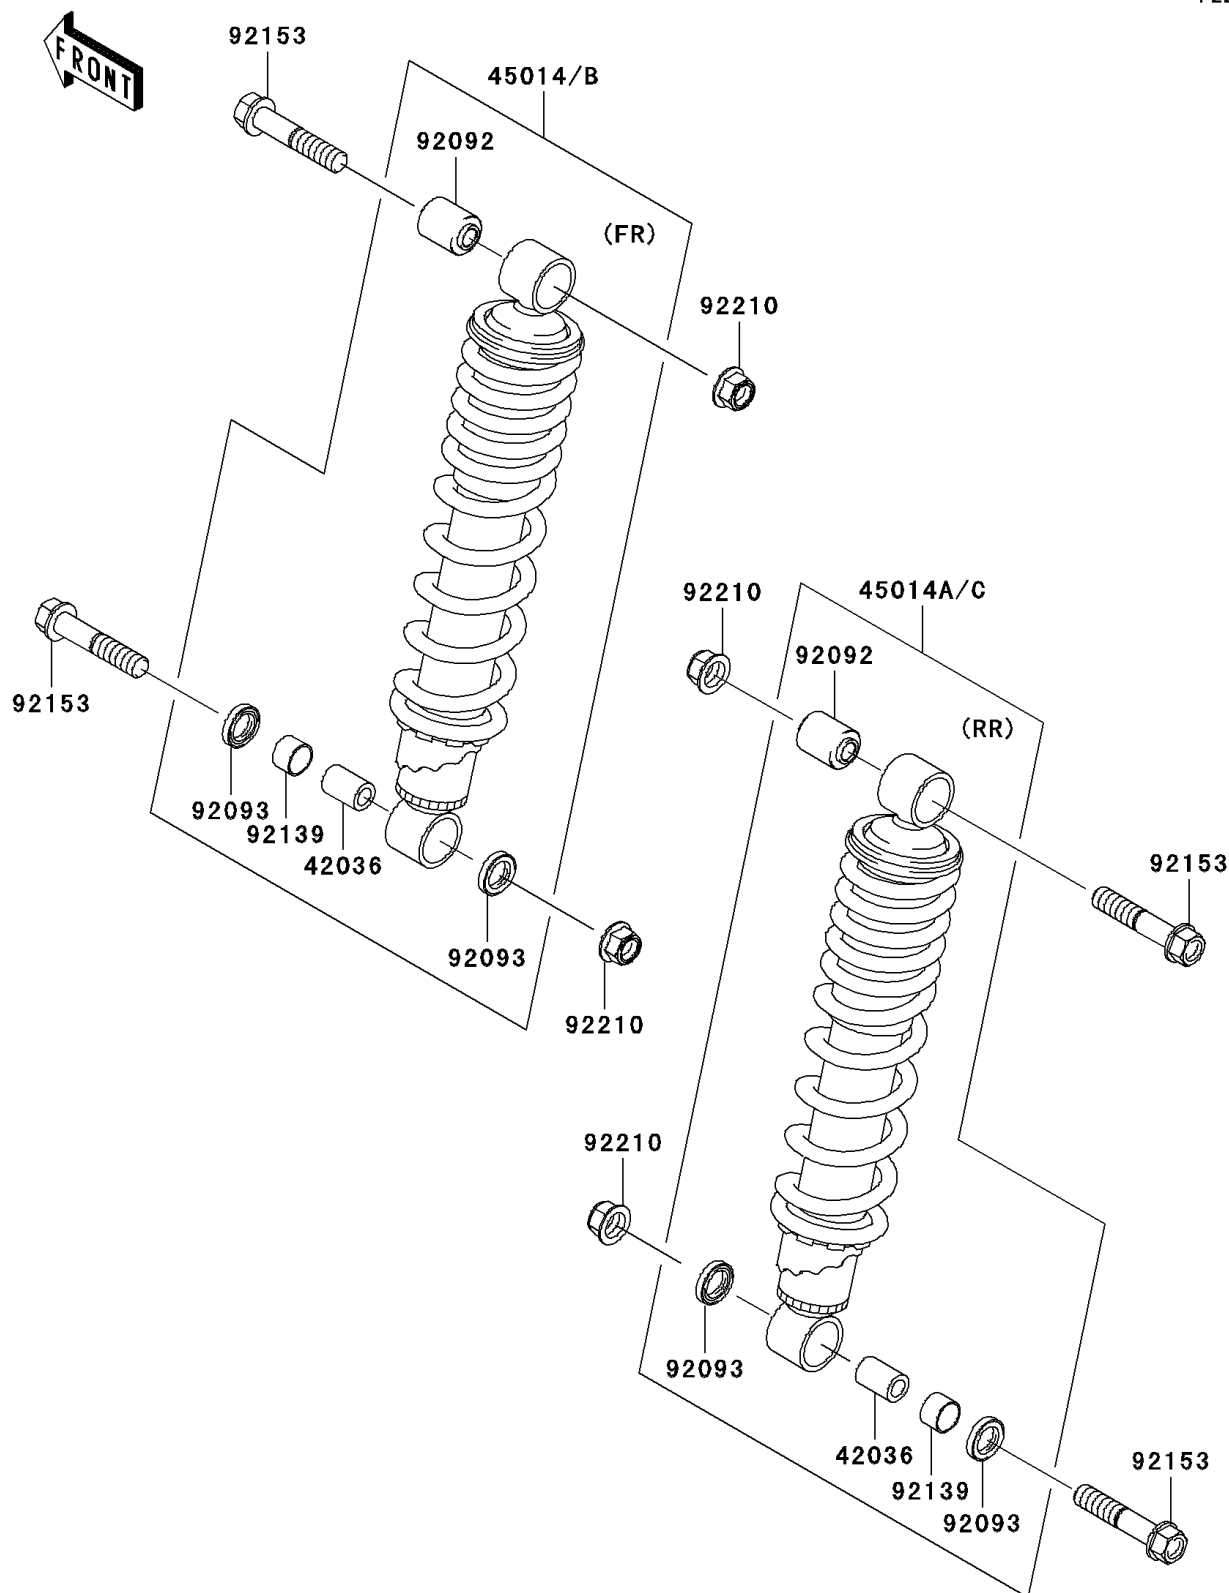

2009 Brute Force 650 4x4i Hardwoods Green HD



PARTS LIST

Shock Absorber(s)

ITEM NAME	PART NUMBER	QUANTITY
SLEEVE (Ref # 42036)	42036-0018	4
SHOCKABSORBER,FR,E COAT BLACK (Ref # 45014B)	45014-0203-17D	2
SHOCKABSORBER,RR,E COAT BLACK (Ref # 45014C)	45014-0204-17D	2
BUSHING-RUBBER (Ref # 92092)	92092-0007	4
SEAL (Ref # 92093)	92093-0033	8
BUSHING (Ref # 92139)	92139-0084	4
BOLT,FLANGED,10X50 (Ref # 92153)	92153-1139	8
NUT,LOCK,FLANGED,10MM (Ref # 92210)	92210-0276	8