


2004 Prairie 700 4x4 Hardwoods Green HD

PARTS DIAGRAM

Shock Absorber(s)

F2280

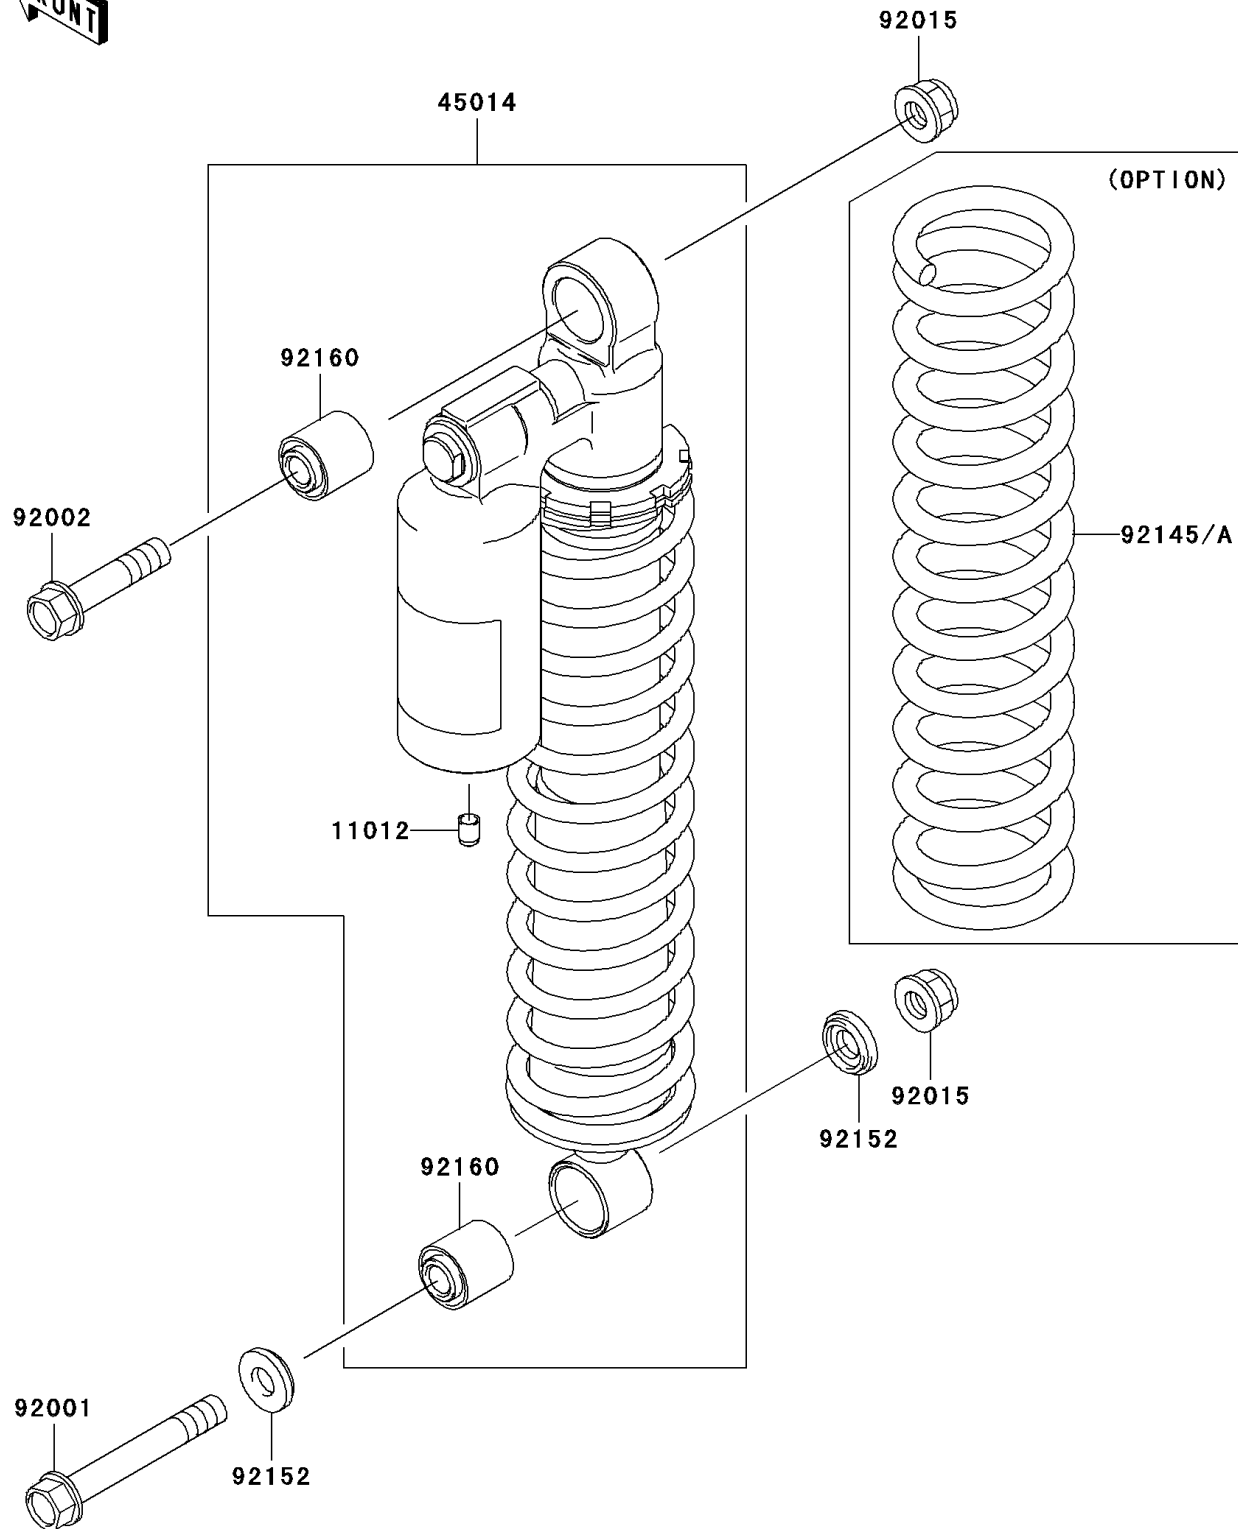

2004 Prairie 700 4x4 Hardwoods Green HD

Kawasaki
Let the Good Times Roll®

PARTS LIST

Shock Absorber(s)

ITEM NAME	PART NUMBER	QUANTITY
CAP (Ref # 11012)	11012-1283	1
SHOCKABSORBER (Ref # 45014)	45014-0028	1
BOLT,FLANGED,12X88 (Ref # 92001)	92001-1693	1
BOLT,FLANGED,12X55 (Ref # 92002)	92002-1840	1
NUT,FLANGED,LOCK,12MM (Ref # 92015)	92015-1617	2
SPRING,SHOCKABSORBER,K=2.5 (Ref # 92145)	92145-0010	1
COLLAR (Ref # 92152)	92152-1293	2
DAMPER,SHOCKABSORBER (Ref # 92160)	92160-1777	2