


2008 Brute Force® 650 4x4i

Kawasaki
Let the Good Times Roll®

PARTS DIAGRAM

Shock Absorber(s)

F2280

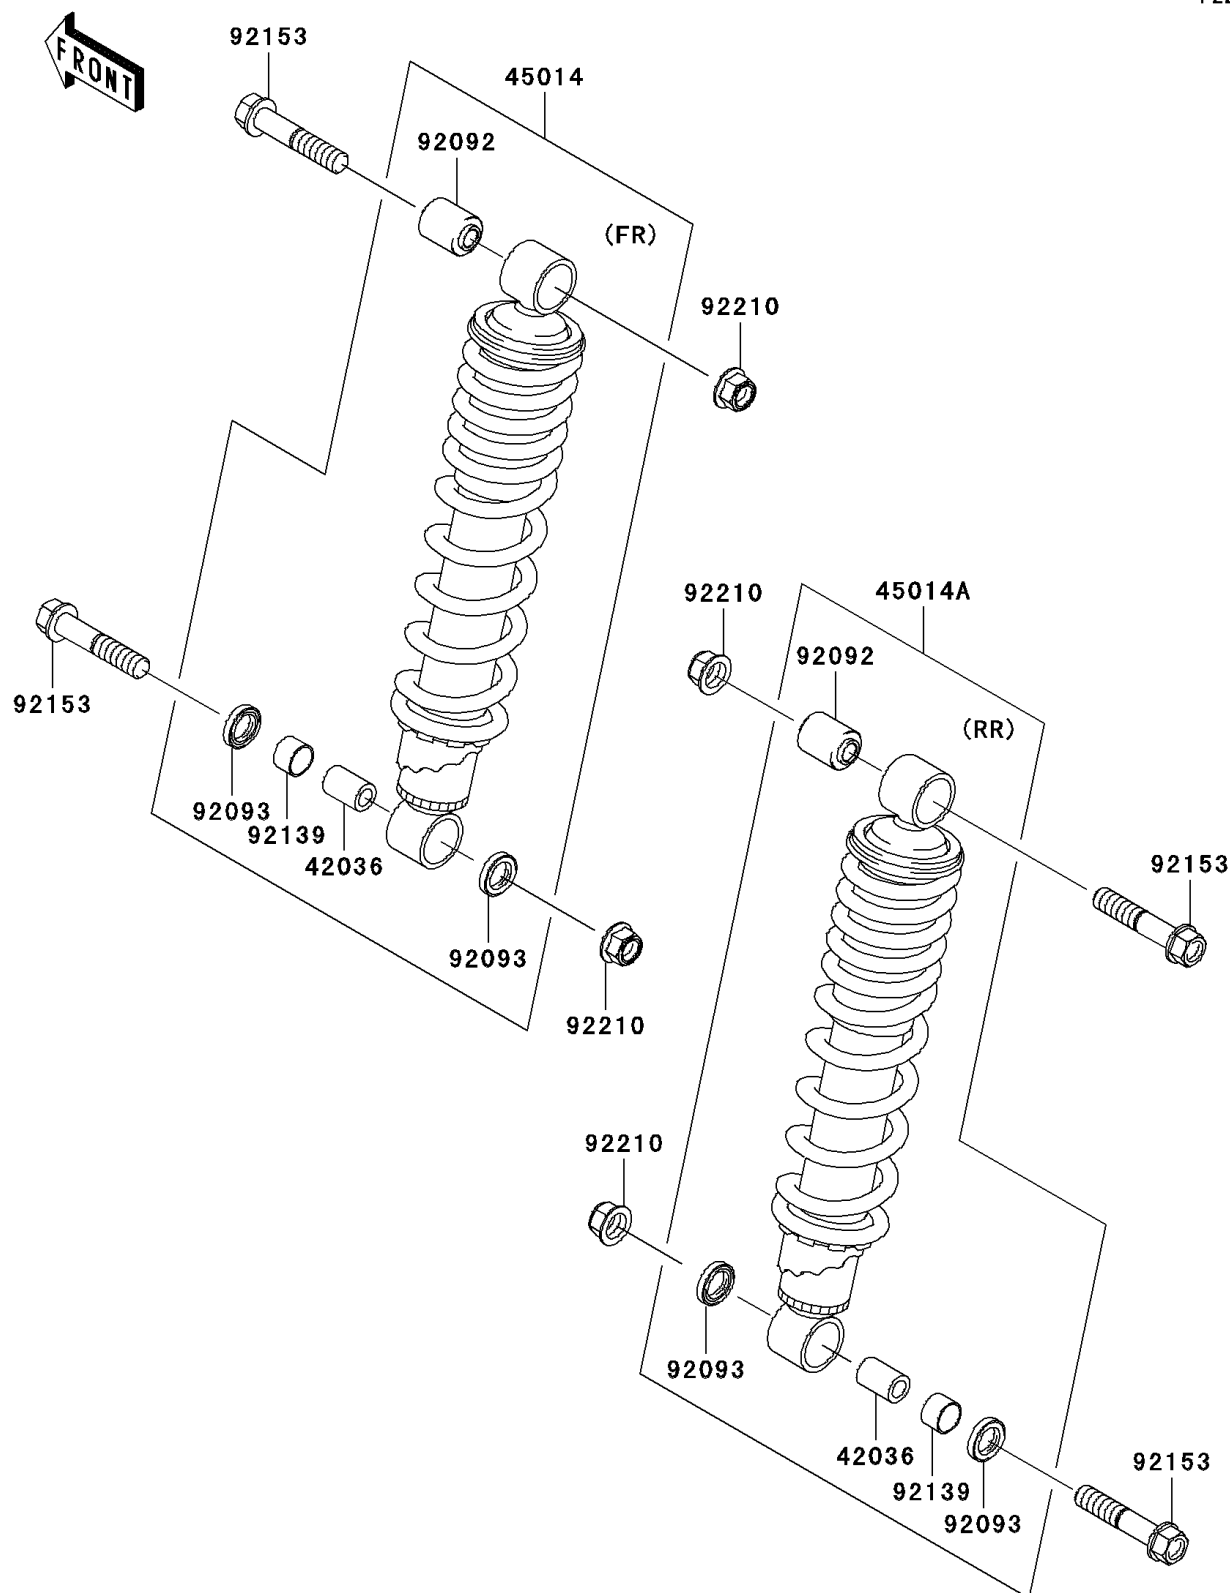

2008 Brute Force® 650 4x4i

PARTS LIST

Shock Absorber(s)

ITEM NAME	PART NUMBER	QUANTITY
SLEEVE (Ref # 42036)	42036-0018	4
SHOCKABSORBER,FR (Ref # 45014)	45014-0138	2
SHOCKABSORBER,RR (Ref # 45014A)	45014-0139	2
BUSHING-RUBBER (Ref # 92092)	92092-0007	4
SEAL (Ref # 92093)	92093-0033	8
BUSHING (Ref # 92139)	92139-0084	4
BOLT,FLANGED,10X50 (Ref # 92153)	92153-1139	8
NUT,LOCK,FLANGED,10MM (Ref # 92210)	92210-0276	8