


2018 VULCAN® 1700 VOYAGER® ABS

Kawasaki
Let the Good Times Roll®

PARTS DIAGRAM

Saddlebags(Trunk)

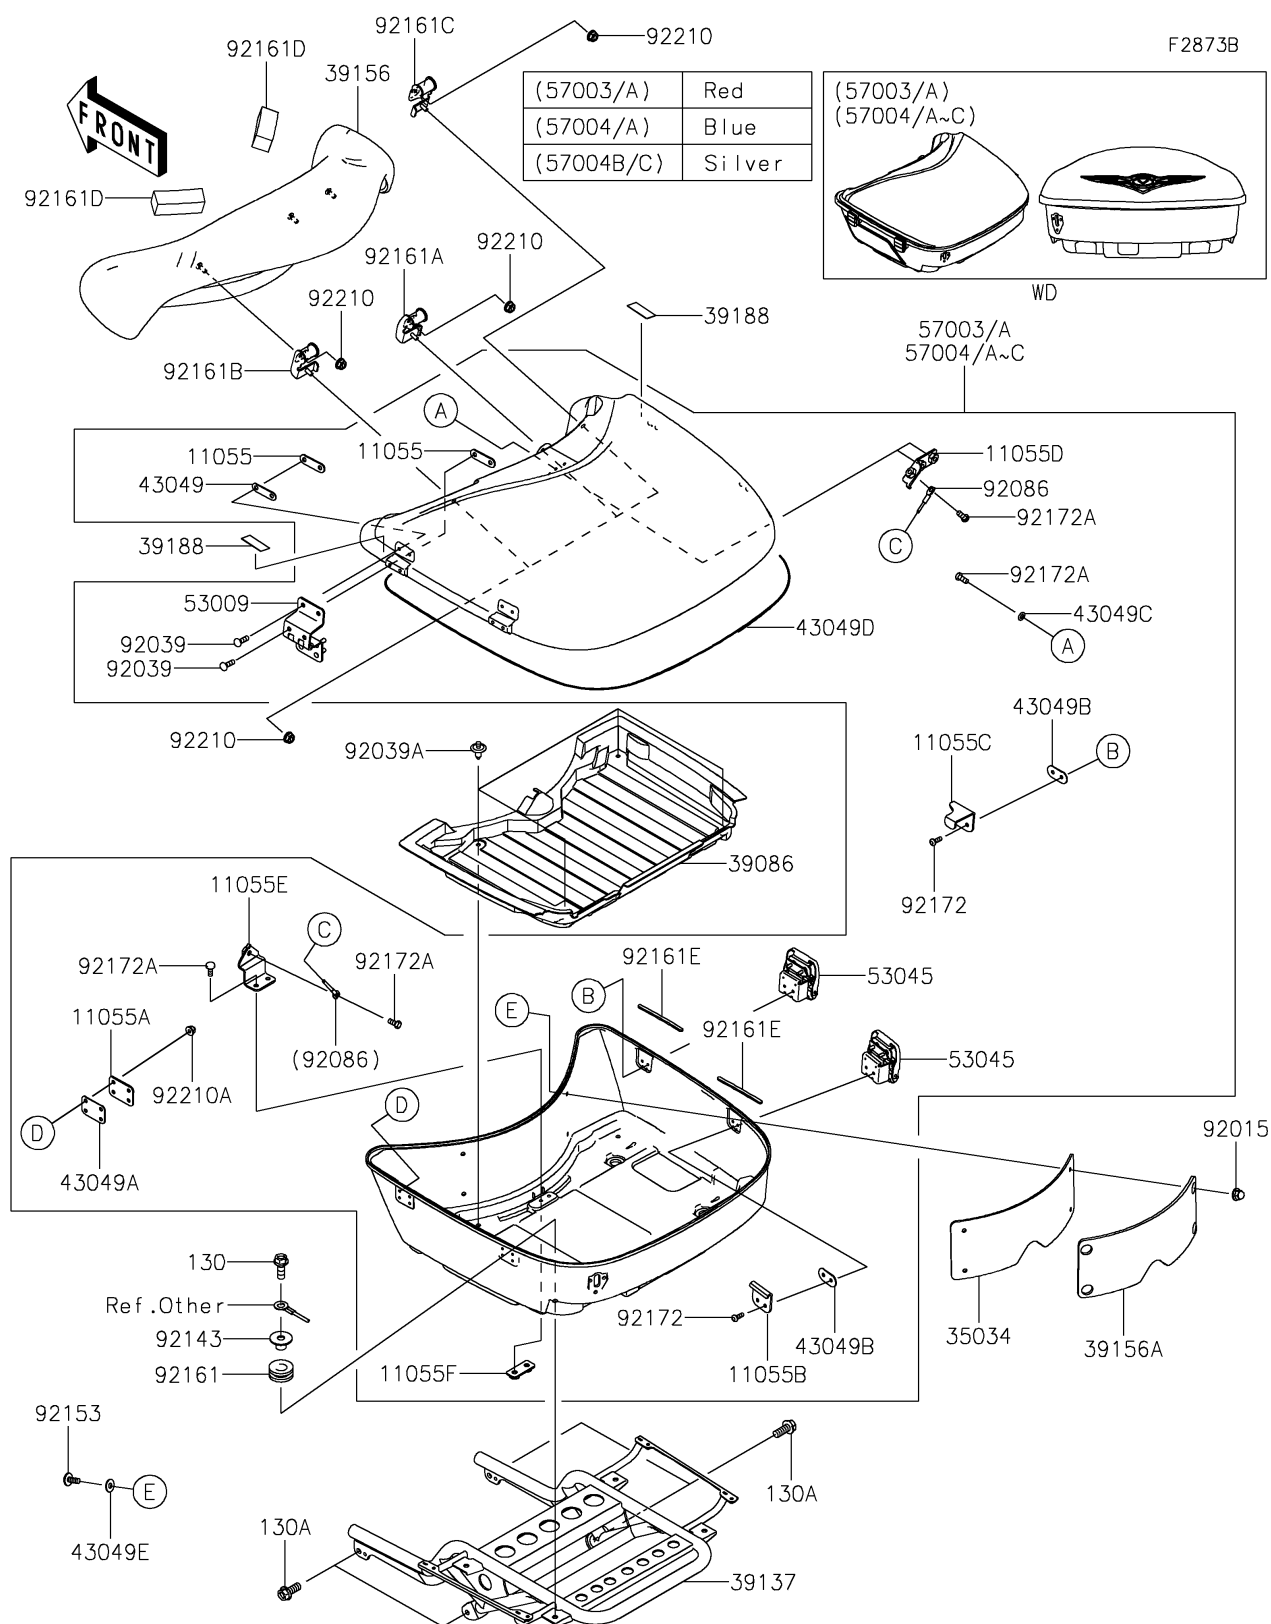

2018 VULCAN® 1700 VOYAGER® ABS

Kawasaki
Let the Good Times Roll®

PARTS LIST

Saddlebags(Trunk)

ITEM NAME	PART NUMBER	QUANTITY
BRACKET (Ref # 11055)	11055-1899	4
BRACKET (Ref # 11055A)	11055-1900	2
BRACKET (Ref # 11055B)	11055-1902	1
BRACKET (Ref # 11055C)	11055-1904	1
BRACKET (Ref # 11055D)	11055-1905	1
BRACKET (Ref # 11055E)	11055-1906	1
BRACKET (Ref # 11055F)	11055-1907	1
REINFORCE (Ref # 35034)	35034-0564	1
PAD-STORAGE (Ref # 39086)	39086-0001	1
STAY-COMP (Ref # 39137)	39137-0555	1
PAD,UPP,BLACK (Ref # 39156)	39156-0523-MA	1
PAD (Ref # 39156A)	39156-0717	1
TAPE (Ref # 39188)	39188-0016	2
PACKING (Ref # 43049)	43049-0016	2
PACKING (Ref # 43049A)	43049-0017	2
PACKING (Ref # 43049B)	43049-0018	2
PACKING (Ref # 43049C)	43049-0019	2
PACKING (Ref # 43049D)	43049-0020	1
PACKING (Ref # 43049E)	43049-0021	4
HINGE (Ref # 53009)	53009-0028	2
HOOK-ASSY (Ref # 53045)	53045-0015	2
BAG-ASSY,CNT,C.C.RED (Ref # 57003)	57003-5493-L1	1
BAG-ASSY,CNT,C.C.RED (Ref # 57003A)	57003-5496-L1	1
NUT,LOCK 6MM (Ref # 92015)	92015-1262	4
RIVET (Ref # 92039)	92039-0091	8
RIVET (Ref # 92039A)	92039-1289	4
WIRE (Ref # 92086)	92086-0014	1
COLLAR (Ref # 92143)	92143-1450	4
BOLT,SOCKET,6X14 (Ref # 92153)	92153-1361	4

2018 VULCAN® 1700 VOYAGER® ABS

Kawasaki
Let the Good Times Roll®

PARTS LIST

Saddlebags(Trunk)

ITEM NAME	PART NUMBER	QUANTITY
DAMPER (Ref # 92161)	92161-0290	4
BOLT-FLANGED,8X22 (Ref # 130)	130BA0822	4
BOLT-FLANGED,8X20 (Ref # 130A)	130CA0820	4
DAMPER (Ref # 92161A)	92161-0754	1
DAMPER (Ref # 92161B)	92161-0755	1
DAMPER (Ref # 92161C)	92161-0756	1
DAMPER (Ref # 92161D)	92161-0802	2
DAMPER (Ref # 92161E)	92161-0819	2
SCREW (Ref # 92172)	92172-0049	4
SCREW (Ref # 92172A)	92172-0450	6
NUT (Ref # 92210)	92210-0401	6
NUT,CAP,4MM (Ref # 92210A)	92210-0434	8