

2008 Vulcan® 1600 Nomad™

Kawasaki

Let the Good Times Roll®

PARTS DIAGRAM


Fenders

F2170



Ref. Front Fork


(35040/A)

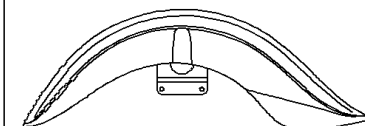

W0D

(35040)	Ebony
(35040A)	Black



(35040B~F)

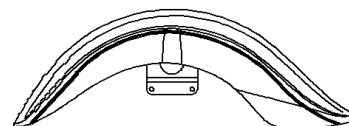

WD

(35040B)	Green/Silver
(35040C)	Ebony/Titanium
(35040D)	Red/Titanium
(35040E)	Red/Black
(35040F)	Blue/Silver

92151

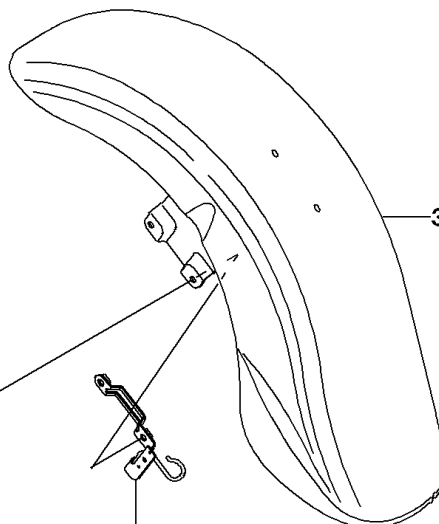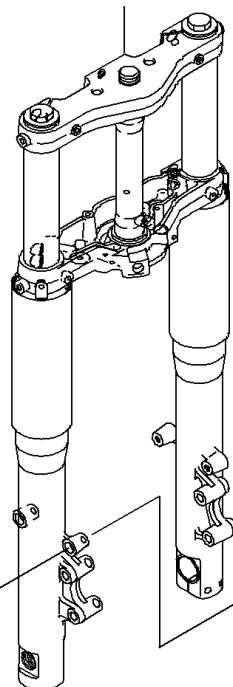


35040/A~F

Ref. Front Master Cylinder

92071A

92075

35022/A~E

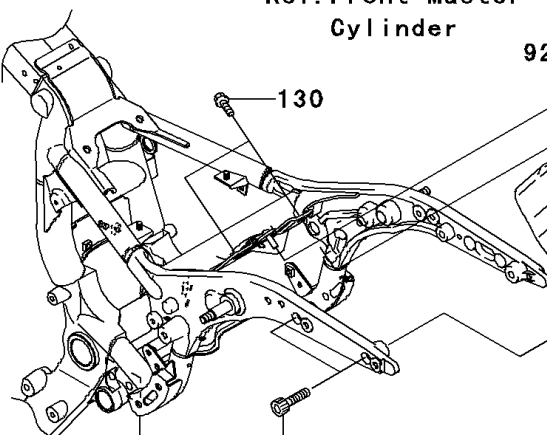

130

Ref. Frame

120

92150

14091

92071A

92071

2008 Vulcan® 1600 Nomad™

PARTS LIST

Fenders

ITEM NAME	PART NUMBER	QUANTITY
BOLT-SOCKET,8X30 (Ref # 120)	120S0830	4
BOLT-FLANGED,8X16 (Ref # 130)	130J0816	2
COVER,TAIL LAMP (Ref # 14091)	14091-0370	1
FENDER-COMP-REAR,M.BLACK (Ref # 35022B)	35022-0024-17K	1
FENDER-COMP-FRONT,M.BLACK (Ref # 35040A)	35040-0012-17K	1
GROMMET,10MM (Ref # 92071)	92071-019	1
GROMMET (Ref # 92071A)	92071-1265	2
DAMPER (Ref # 92075)	92075-1067	1
BOLT,FLANGED,6X14 (Ref # 92150)	92150-1689	4
BOLT,SOCKET,8X35 (Ref # 92151)	92151-1535	4