



# 2011 MULE™ 610 4x4

## PARTS DIAGRAM

### Shock Absorber(s)

**Kawasaki**  
Let the Good Times Roll®

F2280

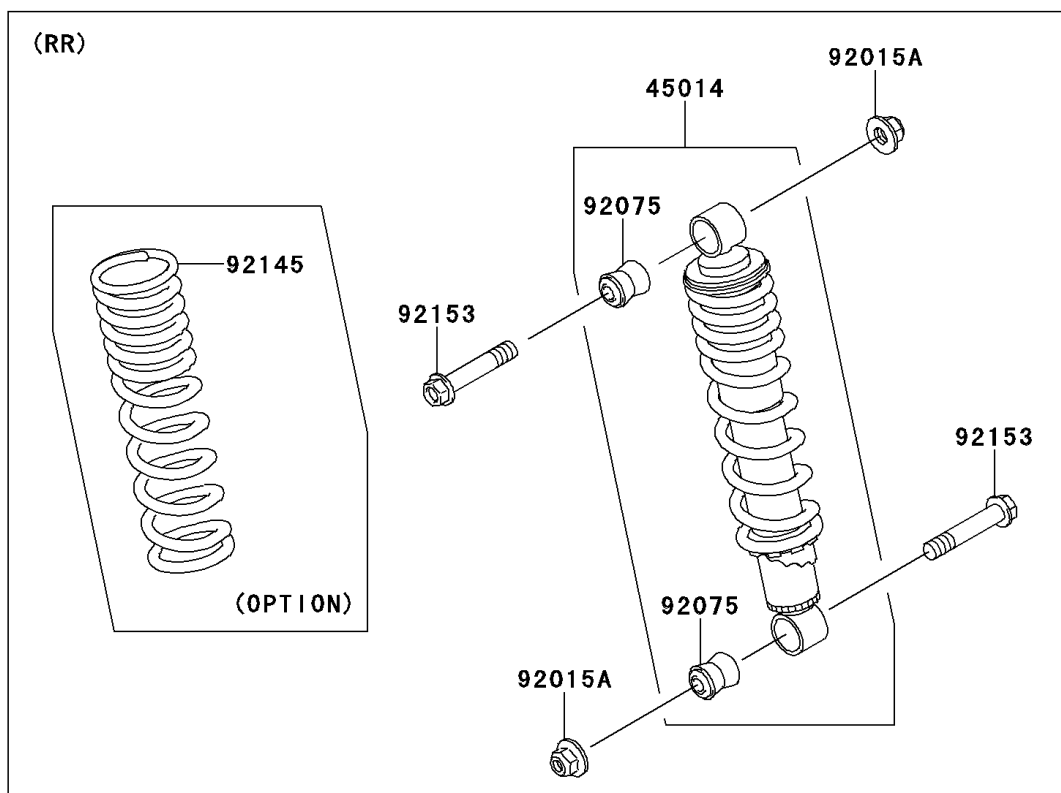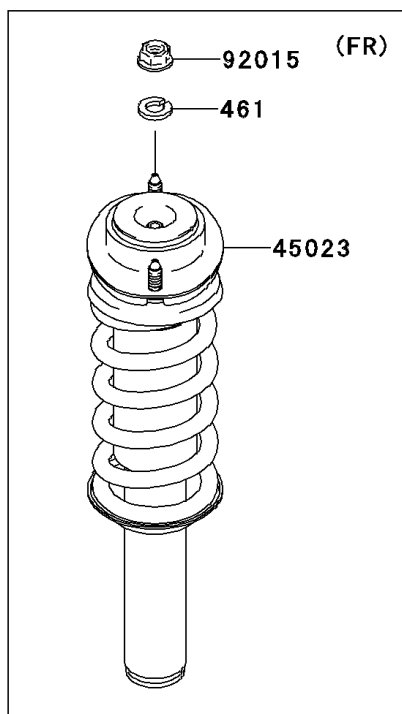

# 2011 MULE™ 610 4x4

## PARTS LIST

### Shock Absorber(s)

| ITEM NAME                                  | PART NUMBER | QUANTITY |
|--------------------------------------------|-------------|----------|
| SHOCKABSORBER (Ref # 45014)                | 45014-0100  | 2        |
| STRUT (Ref # 45023)                        | 45023-0003  | 2        |
| NUT,FLANGED,10MM (Ref # 92015)             | 92015-1428  | 4        |
| NUT,LOCK,10MM (Ref # 92015A)               | 92015-1597  | 4        |
| DAMPER,SHOCKABSORBER (Ref # 92075)         | 92075-1784  | 4        |
| SPRING,SHOCK,K=24.5/44.1N/MM (Ref # 92145) | 92145-0400  | 2        |
| BOLT,FLANGED,10X53.5 (Ref # 92153)         | 92153-1698  | 4        |
| WASHER-SPRING,10MM (Ref # 461)             | 461DA1000   | 4        |