


2020 Z900 ABS

PARTS DIAGRAM

Cowling

F2871

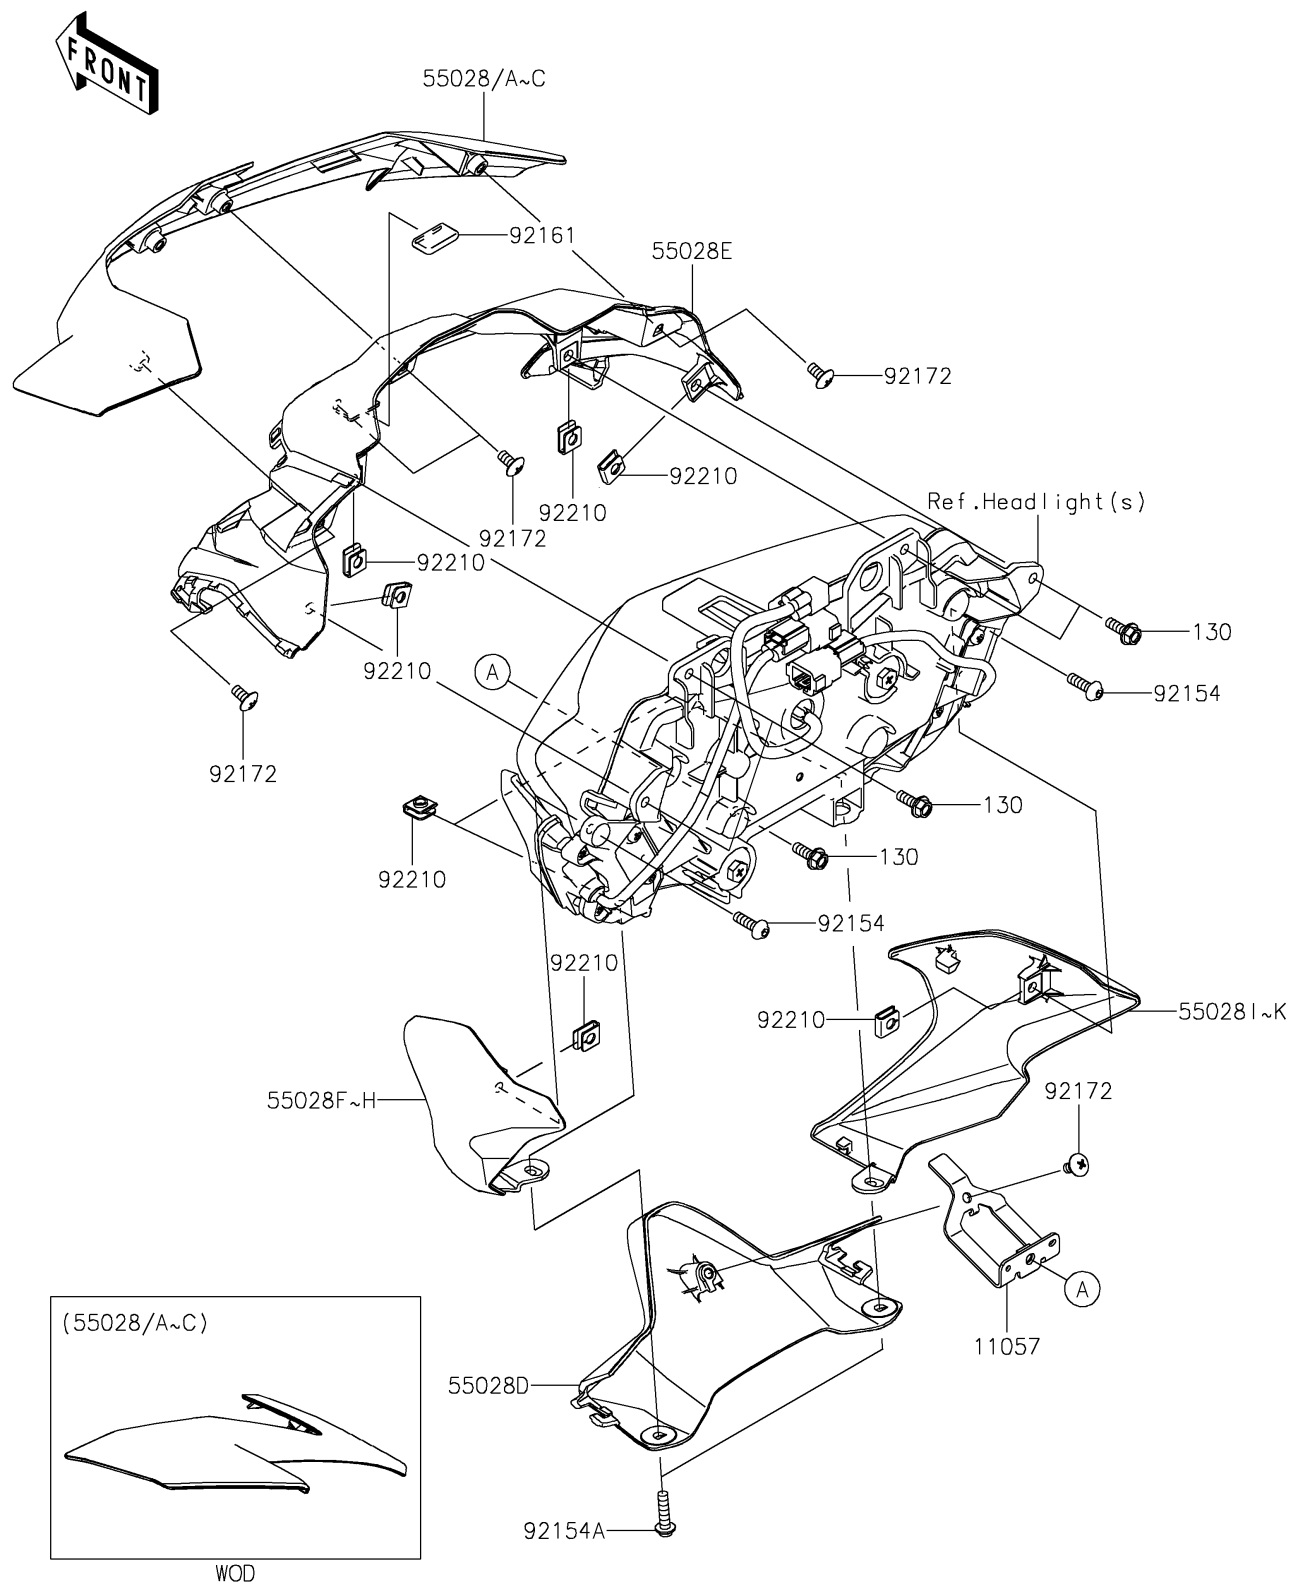

2020 Z900 ABS

PARTS LIST

Cowling

ITEM NAME	PART NUMBER	QUANTITY
BRACKET (Ref # 11057)	11057-2669	1
COWLING,UPP,M.G.GRAY (Ref # 55028)	55028-0703-45W	1
COWLING,UPP,C.L.GREEN (Ref # 55028A)	55028-0703-51P	1
COWLING,UPP,M.S.BLACK (Ref # 55028C)	55028-0703-660	1
COWLING,LWR (Ref # 55028D)	55028-0704	1
COWLING,INNER (Ref # 55028E)	55028-0705	1
COWLING,UPP,SIDE,LH,M.S.BLACK (Ref # 55028F)	55028-0706-660	1
COWLING,UPP,SIDE,LH,M.F.S.BLAC (Ref # 55028H)	55028-0706-739	1
COWLING,UPP,SIDE,RH,M.S.BLACK (Ref # 55028I)	55028-0707-660	1
COWLING,UPP,SIDE,RH,M.F.S.BLAC (Ref # 55028K)	55028-0707-739	1
BOLT,SOCKET,5X16 (Ref # 92154)	92154-0209	2
BOLT,SOCKET,5X20 (Ref # 92154A)	92154-0829	2
DAMPER,12X23 (Ref # 92161)	92161-1367	1
SCREW,TAPPING,5X10 (Ref # 92172)	92172-0262	5
NUT (Ref # 92210)	92210-0571	8
BOLT-FLANGED,5X14 (Ref # 130)	130BA0514	5