

2013 VERSYS®


PARTS DIAGRAM

Cowling

Kawasaki

Let the Good Times Roll®

F2871

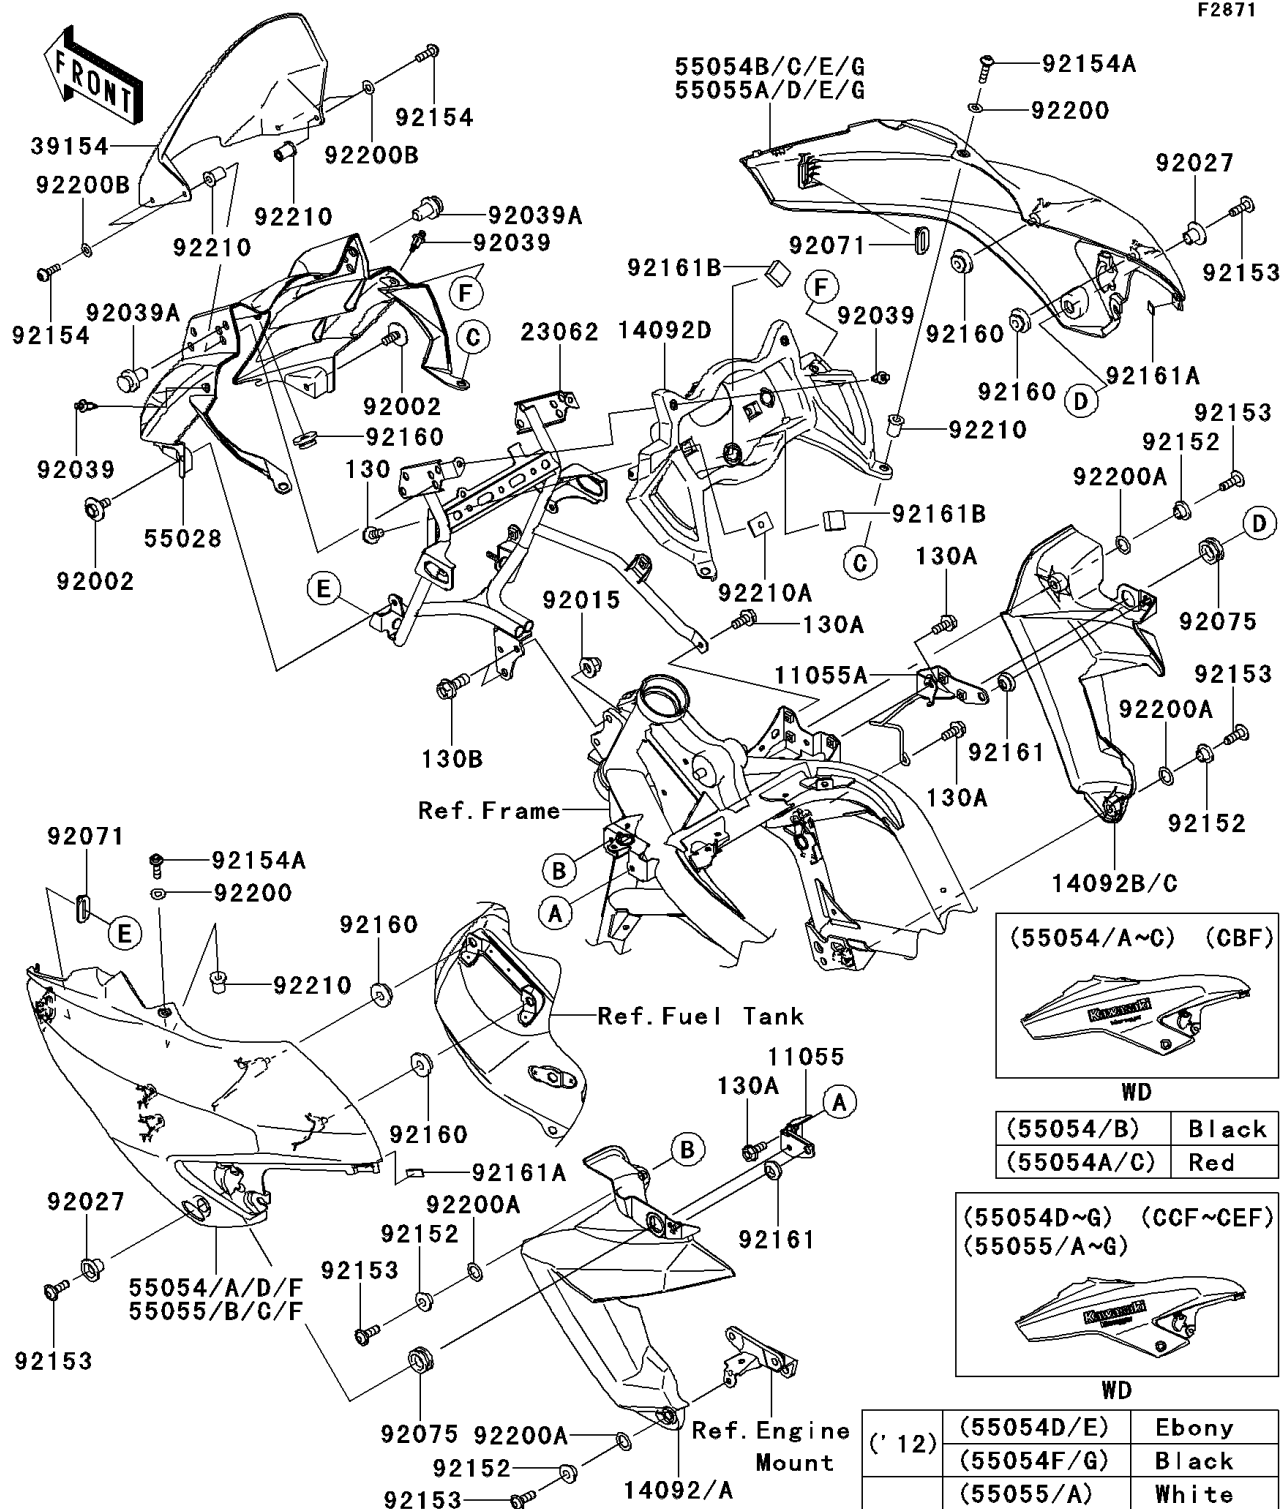

ITEM NAME	PART NUMBER	QUANTITY
BRACKET,COWLING,LH (Ref # 11055)	11055-1887	1
BRACKET,COWLING,RH (Ref # 11055A)	11055-1888	1
COVER,RADIATOR,LH,F.S.BLACK (Ref # 14092)	14092-0074-18T	1
COVER,RADIATOR,RH,F.S.BLACK (Ref # 14092B)	14092-0075-18T	1
COVER,METER (Ref # 14092D)	14092-0264	1
BRACKET-COMP,COWLING,CNT (Ref # 23062)	23062-0112	1
WINDSHIELD (Ref # 39154)	39154-0053	1
COWLING,UPP (Ref # 55028)	55028-0309	1
COWLING,SIDE,LH,P.S.WHITE (Ref # 55055)	55055-5099-15S	1
COWLING,SIDE,RH,P.S.WHITE (Ref # 55055A)	55055-5100-15S	1
COWLING,SIDE,LH,M.M.GRAY (Ref # 55055B)	55055-5101-35J	1
COWLING,SIDE,LH,C.T.BLUE (Ref # 55055C)	55055-5101-620	1
COWLING,SIDE,RH,M.M.GRAY (Ref # 55055D)	55055-5102-35J	1
COWLING,SIDE,RH,C.T.BLUE (Ref # 55055E)	55055-5102-620	1
BOLT,6X16 (Ref # 92002)	92002-1188	2
NUT,CAP,8MM (Ref # 92015)	92015-1151	2
COLLAR,L=9.6 (Ref # 92027)	92027-1045	2
RIVET (Ref # 92039)	92039-0023	4
RIVET (Ref # 92039A)	92039-0098	2
GROMMET (Ref # 92071)	92071-0013	2
DAMPER (Ref # 92075)	92075-1634	2
COLLAR (Ref # 92152)	92152-1359	4
BOLT,6X18 (Ref # 92153)	92153-0478	6
BOLT,SOCKET,5X16 (Ref # 92154)	92154-0209	4
BOLT,SOCKET,5X20 (Ref # 92154A)	92154-0210	2
DAMPER (Ref # 92160)	92160-1613	5
DAMPER (Ref # 92161)	92161-0631	2
DAMPER (Ref # 92161A)	92161-0726	2
DAMPER,20X20X10 (Ref # 92161B)	92161-0835	2

2013 VERSYS®

PARTS LIST

Cowling

ITEM NAME	PART NUMBER	QUANTITY
WASHER,NYLONE,5.3X11.5X0.5 (Ref # 92200)	92200-0006	2
WASHER,10.4X15.9X0.5 (Ref # 92200A)	92200-0157	4
WASHER,NYLON,5.3X11.5X0.5 (Ref # 92200B)	92200-1480	4
NUT,WELL,5MM (Ref # 92210)	92210-0498	6
NUT,PLATE,6MM (Ref # 92210A)	92210-1352	2
BOLT-FLANGED,6X12 (Ref # 130)	130BA0612	2
BOLT-FLANGED,6X14 (Ref # 130A)	130BA0614	4
BOLT-FLANGED,8X20 (Ref # 130B)	130BA0820	2