


2016 Ninja® 650 ABS

PARTS DIAGRAM

Cowling

Kawasaki

Let the Good Times Roll®

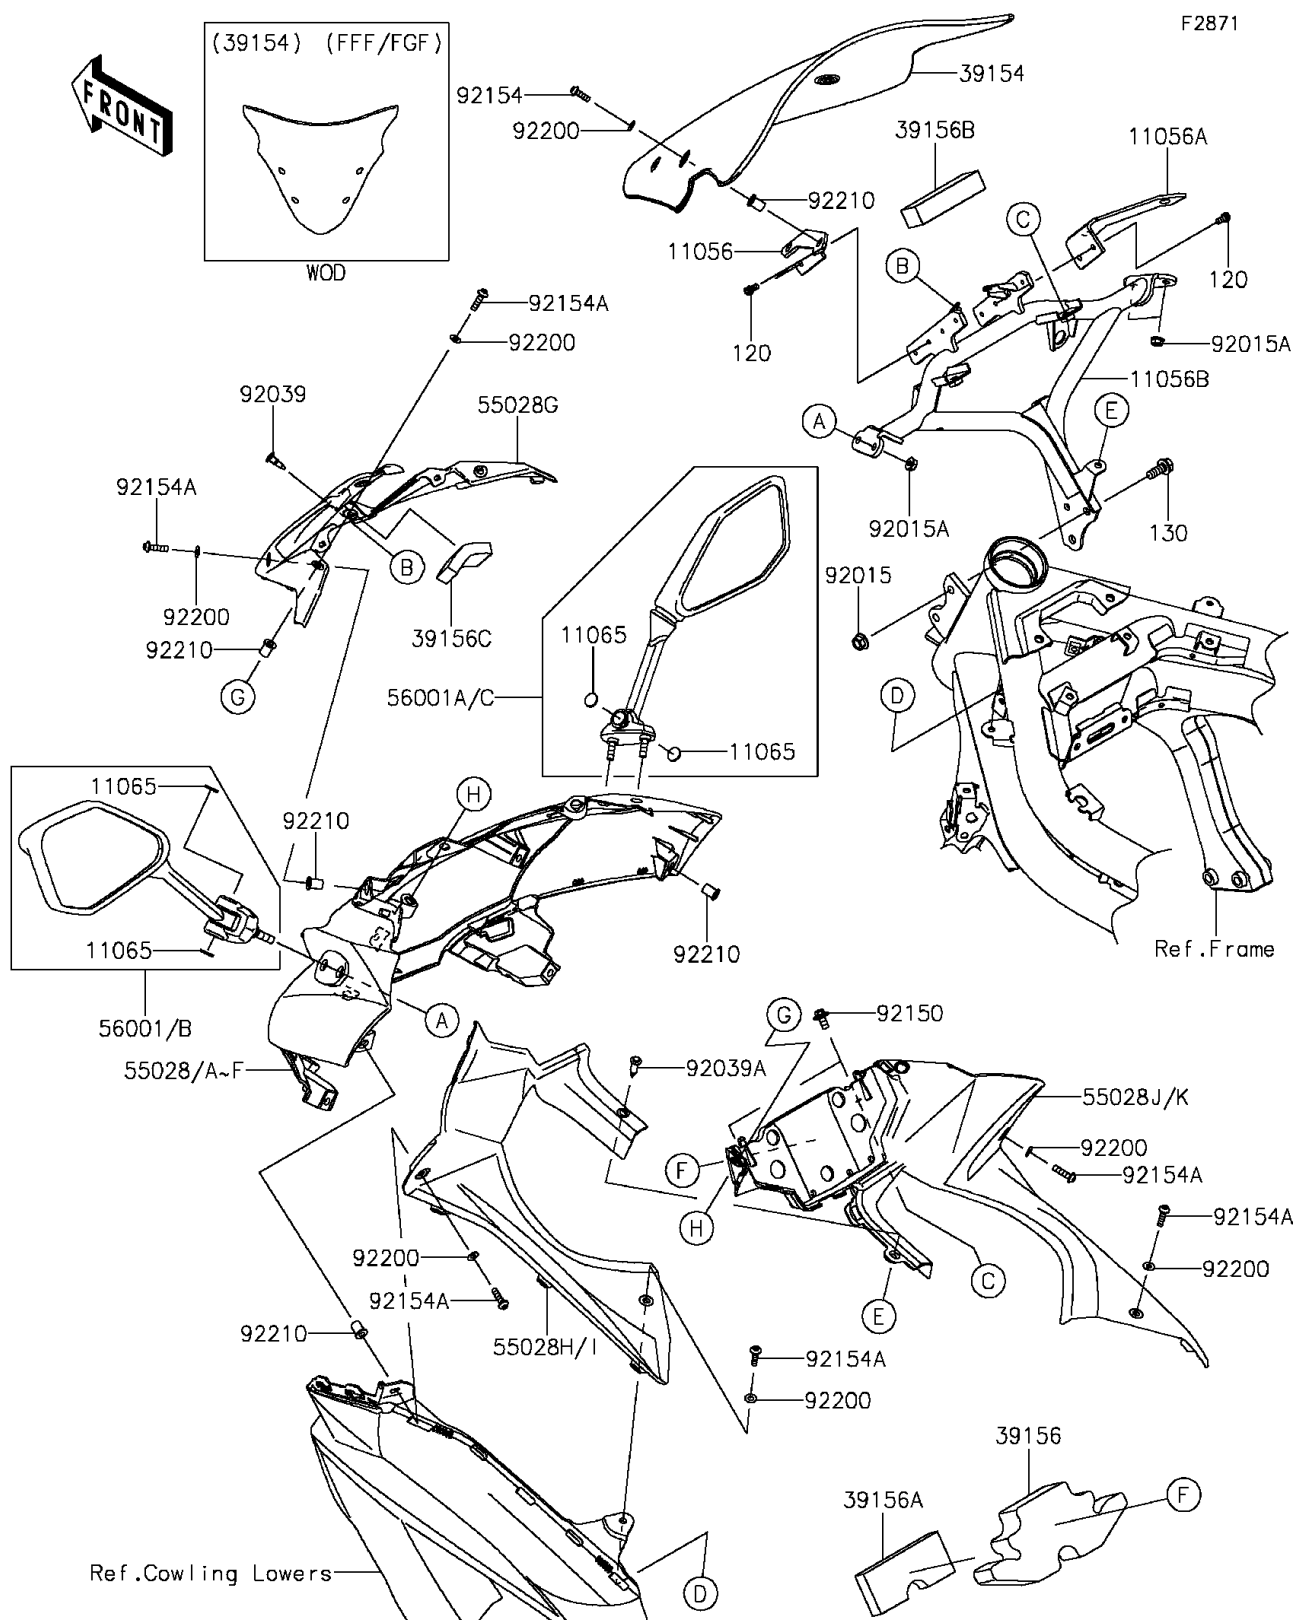

2016 Ninja® 650 ABS

PARTS LIST

Cowling

ITEM NAME	PART NUMBER	QUANTITY
BRACKET,LH (Ref # 11056)	11056-0992	1
BRACKET,RH (Ref # 11056A)	11056-0993	1
BRACKET,COWLING STAY (Ref # 11056B)	11056-2062	1
CAP (Ref # 11065)	11065-0787	4
WINDSHIELD (Ref # 39154)	39154-0307	1
PAD (Ref # 39156)	39156-1823	1
PAD,45X106X15 (Ref # 39156A)	39156-1824	1
PAD,25X90X20 (Ref # 39156B)	39156-1825	1
PAD,30X65X12 (Ref # 39156C)	39156-1826	1
COWLING,UPP,M.C.GRAY (Ref # 55028B)	55028-0366-51A	1
COWLING,UPP,C.L.GREEN (Ref # 55028C)	55028-0366-51P	1
COWLING,UPP,C.P.RED (Ref # 55028F)	55028-0366-A5	1
COWLING,UPP,CNT (Ref # 55028G)	55028-0367	1
COWLING,INNER,LH,F.BLACK (Ref # 55028I)	55028-0368-6Z	1
COWLING,INNER,RH,F.BLACK (Ref # 55028K)	55028-0470-6Z	1
MIRROR-ASSY,LH (Ref # 56001B)	56001-0274	1
MIRROR-ASSY,RH (Ref # 56001C)	56001-0275	1
NUT,FLANGED,8MM (Ref # 92015)	92015-1014	2
NUT,FLANGED,6MM,BLACK (Ref # 92015A)	92015-1233	4
RIVET (Ref # 92039)	92039-0068	2
RIVET (Ref # 92039A)	92039-1283	1
BOLT,6X14 (Ref # 92150)	92150-1340	2
BOLT,SOCKET,5X16 (Ref # 92154)	92154-0209	4
BOLT,SOCKET,5X20 (Ref # 92154A)	92154-0829	8
WASHER,NYLONE,5.3X11.5X0.5 (Ref # 92200)	92200-0006	12
NUT,WELL,5MM (Ref # 92210)	92210-0498	10
BOLT-SOCKET,5X10 (Ref # 120)	120CB0510	4
BOLT-FLANGED,8X20 (Ref # 130)	130BA0820	2