

2000 Vulcan 1500 Nomad Fi



PARTS DIAGRAM

Fenders


Kawasaki

Let the Good Times Roll®


F2170

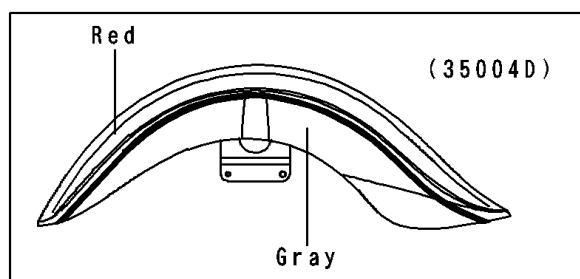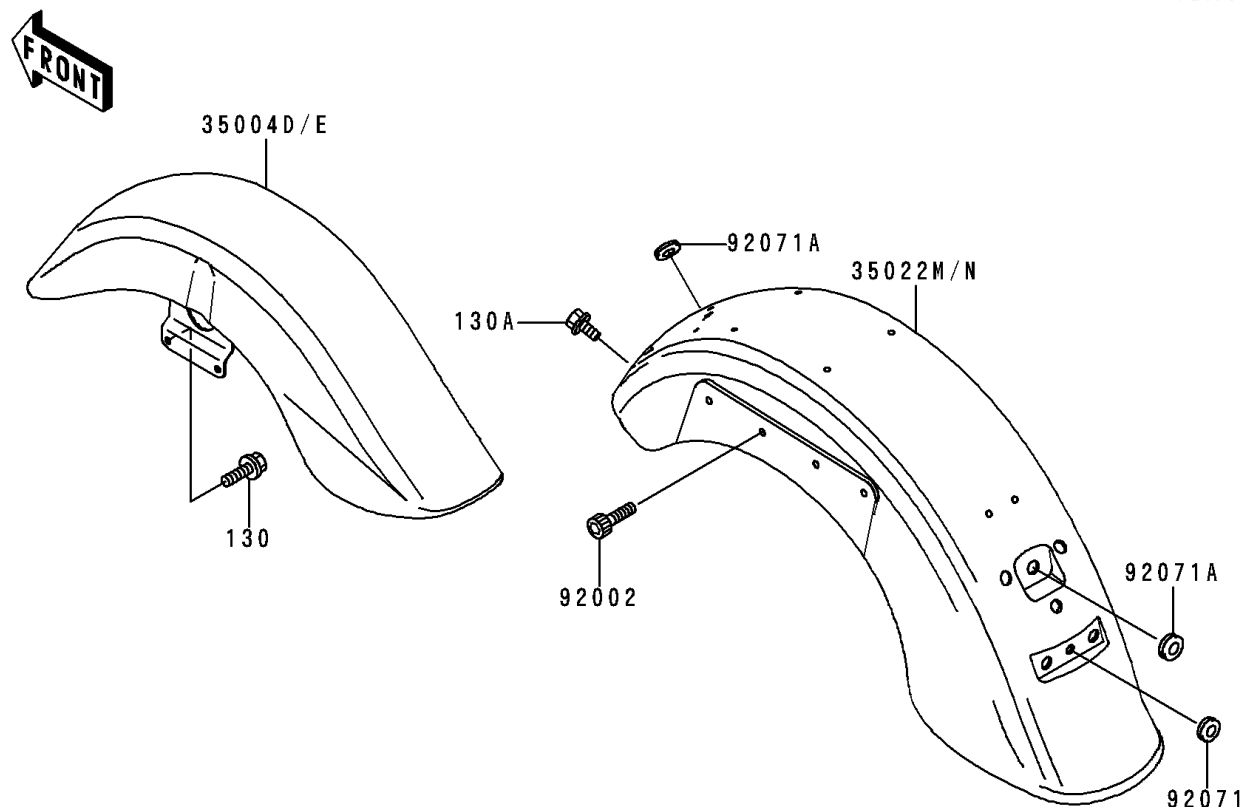


WD

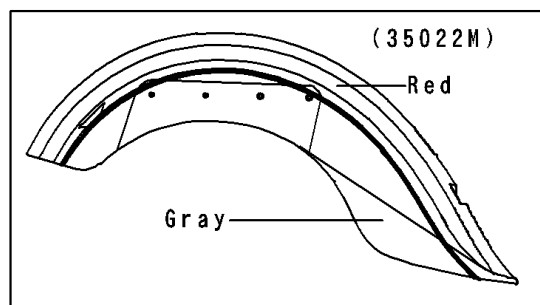

WD

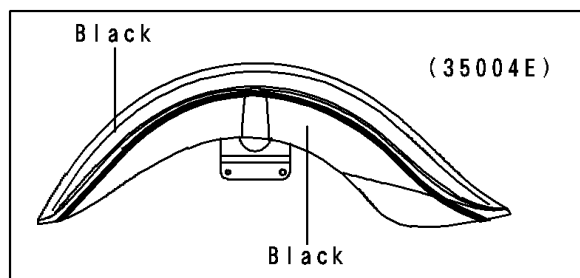

WD

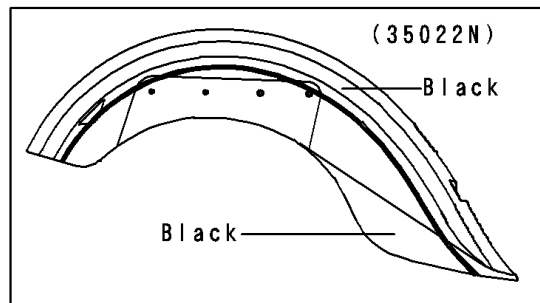

WD

2000 Vulcan 1500 Nomad Fi

PARTS LIST

Fenders



ITEM NAME	PART NUMBER	QUANTITY
BOLT-FLANGED,8X14 (Ref # 130)	130J0814	4
BOLT-FLANGED,8X16,BLACK (Ref # 130A)	130J0816	2
FENDER-FRONT,RED/GRAY (Ref # 35004D)	35004-5153-C3	1
FENDER-FRONT,BLACK MICA (Ref # 35004E)	35004-5154-20	1
FENDER-COMP-REAR,RED/GRAY (Ref # 35022M)	35022-5063-C3	1
FENDER-COMP-REAR,BLACK MICA (Ref # 35022N)	35022-5064-20	1
BOLT,SOCKET,8X25 (Ref # 92002)	92002-1442	2
GROMMET,10MM (Ref # 92071)	92071-019	1
GROMMET,13MM (Ref # 92071A)	92071-099	3