

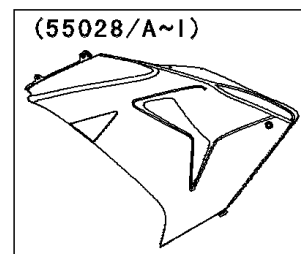


Cowling Lowers


Let the Good Times Roll®

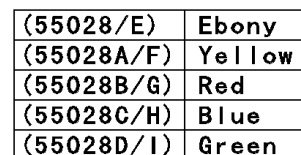

WOD

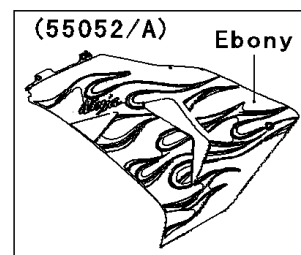

WD

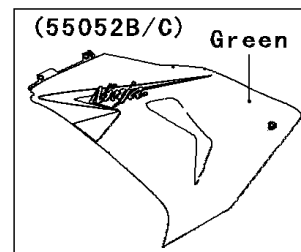

WD

2006 Ninja® ZX™-10R

PARTS LIST

Cowling Lowers

ITEM NAME	PART NUMBER	QUANTITY
BRACKET (Ref # 11054)	11054-0526	1
PAD (Ref # 39156)	39156-0134	1
PAD,LWR COWLING,RH (Ref # 39156A)	39156-0136	1
COWLING,CNT,LH,EBONY (Ref # 55028)	55028-0066-H8	1
COWLING,CNT,LH,P.S.YELLOW (Ref # 55028A)	55028-0066-10A	1
COWLING,CNT,LH,L.GREEN (Ref # 55028D)	55028-0066-777	1
COWLING,CNT,RH,EBONY (Ref # 55028E)	55028-0067-H8	1
COWLING,CNT,RH,P.S.YELLOW (Ref # 55028F)	55028-0067-10A	1
COWLING,CNT,RH,L.GREEN (Ref # 55028I)	55028-0067-777	1
COWLING,LWR,LH,EBONY (Ref # 55028J)	55028-0068-H8	1
COWLING,LWR,LH,F.S.BLACK (Ref # 55028K)	55028-0068-11J	1
COWLING,LWR,RH,EBONY (Ref # 55028O)	55028-0069-H8	1
COWLING,LWR,RH,F.S.BLACK (Ref # 55028P)	55028-0069-11J	1
COWLING,FR,LH (Ref # 55028T)	55028-0071	1
COWLING,FR,RH (Ref # 55028U)	55028-0072	1
NUT,WELL,5MM (Ref # 92015)	92015-1757	14
RIVET (Ref # 92039)	92039-0014	3
RIVET (Ref # 92039A)	92039-0023	8
DAMPER (Ref # 92075)	92075-1808	2
BOLT,SOCKET,6MM (Ref # 92153)	92153-0489	4
BOLT,SOCKET,6X11 (Ref # 92153A)	92153-0730	2
BOLT,SOCKET,5X20 (Ref # 92153B)	92153-0873	4
BOLT,8MM (Ref # 92153C)	92153-0993	2
BOLT,SOCKET,5X16 (Ref # 92153D)	92153-1244	10
WASHER,NYLON,5.3X11.5X0.5 (Ref # 92200)	92200-0006	10
WASHER,10.4X15.9X0.5 (Ref # 92200A)	92200-0157	4