
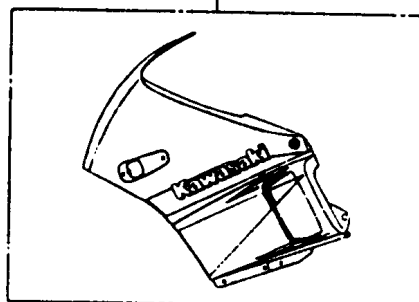



Cowling

Let the Good Times Roll®



WD

(55028)

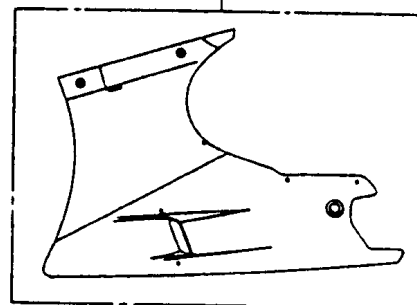

WOD

1997 Ninja® 600R

PARTS LIST

Cowling

ITEM NAME	PART NUMBER	QUANTITY
BRACKET,COWLING (Ref # 11045)	11045-1538	1
COVER,HEAD LAMP,F.RED (Ref # 14024)	14024-1408-B1	1
COVER,COWLING,INNER,RH (Ref # 14024A)	14024-1538	1
COVER,TRIM END (Ref # 14025)	14025-1756	2
WINDSHIELD (Ref # 39154)	39154-1107	1
TRIM,WINDSHIELD (Ref # 53044)	53044-1130	1
TRIM,COWLING,LH (Ref # 53044A)	53044-1193	1
TRIM,COWLING,RH (Ref # 53044B)	53044-1194	1
TRIM (Ref # 53044C)	53044-1198	1
COWLING,LWR,RED/BLUE (Ref # 55028)	55028-1156-3D	1
COWLING-ASSY.,UPP,LH,F.RED (Ref # 55050)	55050-5068-B1	1
COWLING-ASSY.,UPP,RH,F.RED (Ref # 55050A)	55050-5069-B1	1
MIRROR-ASSY,LH (Ref # 56001)	56001-1319	1
MIRROR-ASSY,RH (Ref # 56001A)	56001-1320	1
SCREW,6X14 (Ref # 92009)	92009-1288	4
SCREW,5X16 (Ref # 92009A)	92009-1654	6
SCREW,5X20 (Ref # 92009B)	92009-1656	8
NUT,CAP,8MM,BLACK (Ref # 92015)	92015-1174	1
NUT,WELL,5MM (Ref # 92015A)	92015-1640	10
NUT,5MM (Ref # 92015B)	92015-1710	4
WASHER,NYLON,5.3X11.5X1.5 (Ref # 92022)	92022-1521	6
WASHER,6.5X16X1.0 (Ref # 92022A)	92022-1654	2
GROMMET (Ref # 92071)	92071-056	2
DAMPER (Ref # 92075)	92075-1634	2
DAMPER,MIRROR (Ref # 92075A)	92075-1929	2
DAMPER (Ref # 92075B)	92075-1936	2
COLLAR,L=6.5,BLACK (Ref # 92143)	92143-1086	2
COLLAR,L=19.6 (Ref # 92143A)	92143-1100	2
COLLAR,BLACK (Ref # 92143B)	92143-1226	2

1997 Ninja® 600R

PARTS LIST

Cowling



ITEM NAME	PART NUMBER	QUANTITY
BOLT,SOCKET,6X18 (Ref # 92150)	92150-1553	2
BOLT,SOCKET,6X30 (Ref # 92150A)	92150-1554	2
BOLT-FLANGED,8X12,BLACK (Ref # 130)	130C0812	2
SCREW-CSK-CROS,6X30 (Ref # 221)	221C0630	4