


2013 PRAIRIE® 360 4x4

PARTS DIAGRAM

Shock Absorber(s)

Kawasaki
Let the Good Times Roll®

F2280

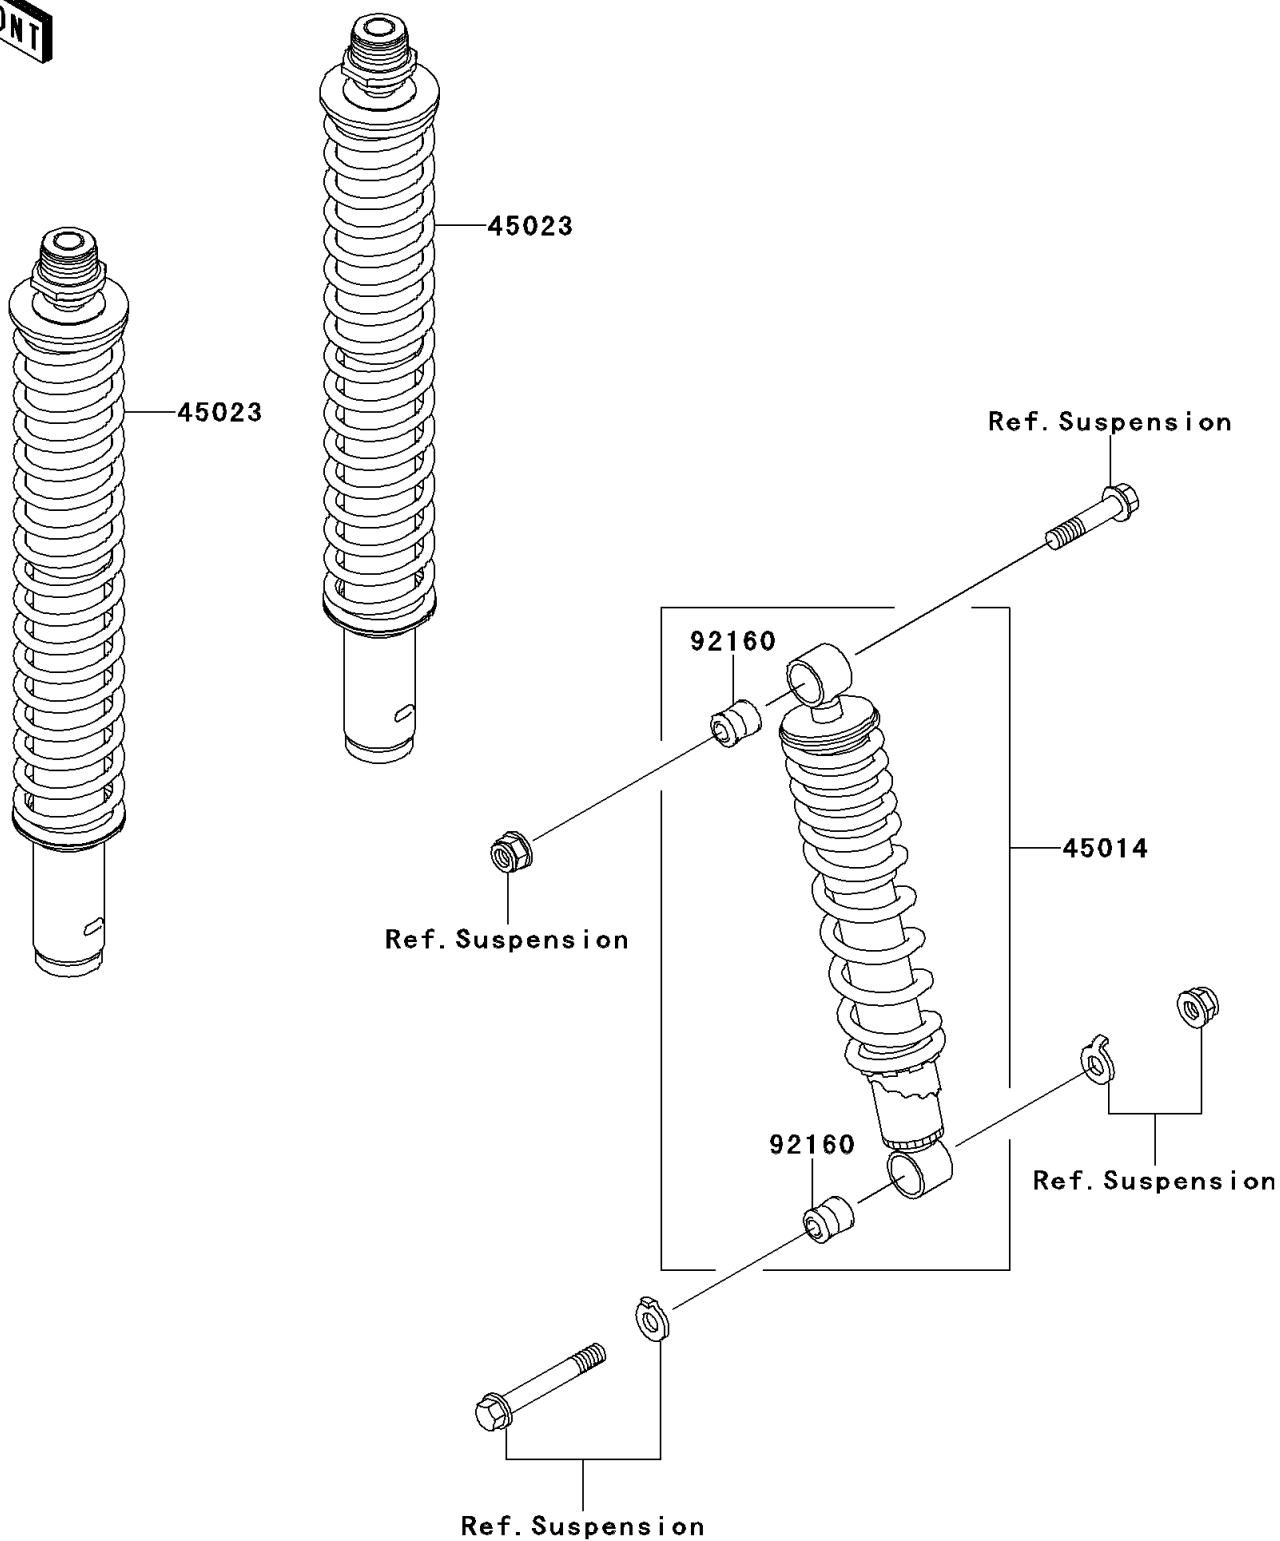

2013 PRAIRIE® 360 4x4

PARTS LIST

Shock Absorber(s)

ITEM NAME	PART NUMBER	QUANTITY
SHOCKABSORBER (Ref # 45014)	45014-0255	1
STRUT (Ref # 45023)	45023-0007	2
DAMPER,SHOCKABSORBER (Ref # 92160)	92160-1777	2