


2013 BRUTE FORCE® 650 4x4i

Kawasaki

Let the Good Times Roll®

PARTS DIAGRAM

Front Fender(s)

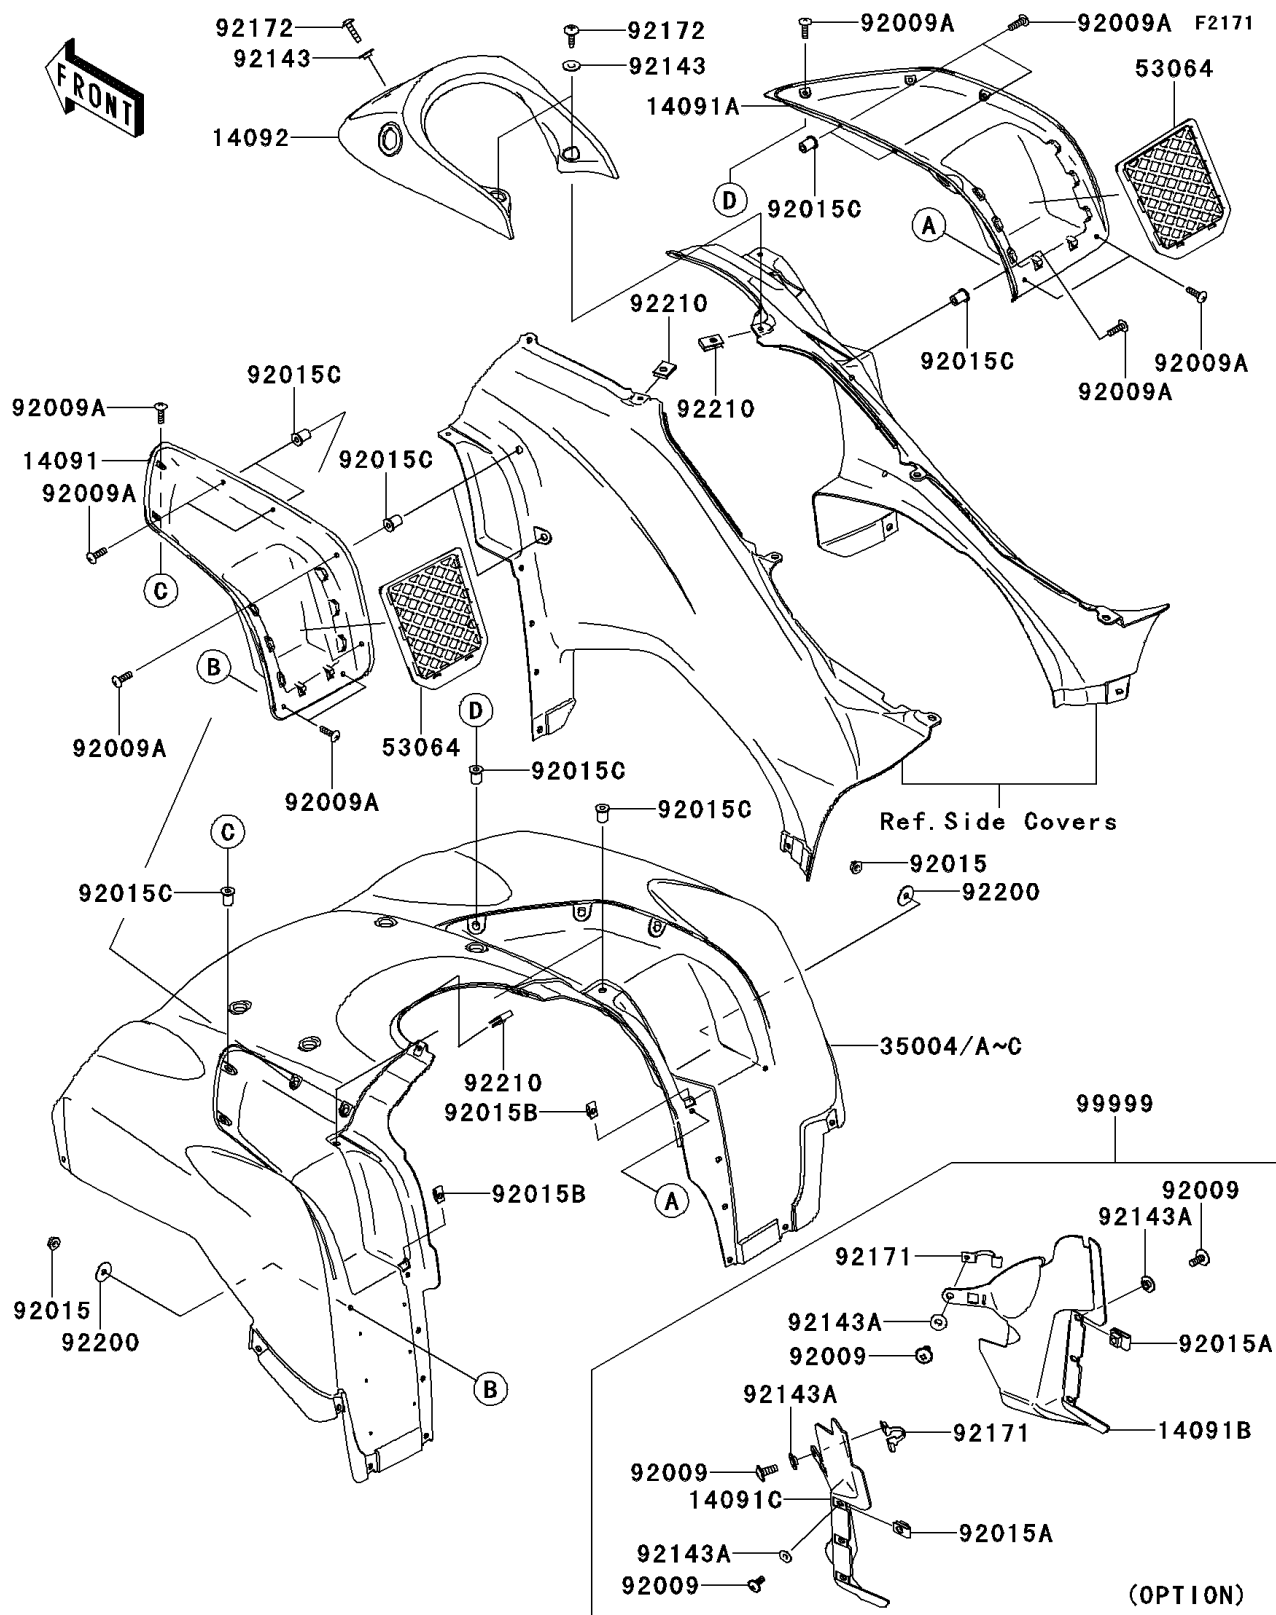

2013 BRUTE FORCE® 650 4x4i

PARTS LIST

Front Fender(s)

ITEM NAME	PART NUMBER	QUANTITY
COVER,POCKET,LH,F.BLACK (Ref # 14091)	14091-0135-6Z	1
COVER,POCKET,RH,F.BLACK (Ref # 14091A)	14091-0136-6Z	1
COVER,SIDE,INNER,RH (Ref # 14091B)	14091-0179	1
COVER,SIDE,INNER,LH (Ref # 14091C)	14091-0337	1
COVER,TOP,F.BLACK (Ref # 14092)	14092-0769-6Z	1
FENDER-FRONT,S.BLACK (Ref # 35004C)	35004-0314-839	1
NET-CARGO (Ref # 53064)	53064-0002	2
SCREW,6X16 (Ref # 92009)	92009-1621	8
SCREW,5X18 (Ref # 92009A)	92009-1655	17
NUT,FLANGED,5MM (Ref # 92015)	92015-1259	2
NUT,6MM (Ref # 92015A)	92015-1602	6
NUT,5MM (Ref # 92015B)	92015-1710	2
NUT,WELL,5MM (Ref # 92015C)	92015-1757	15
COLLAR (Ref # 92143)	92143-1087	3
COLLAR (Ref # 92143A)	92143-1087	8
CLAMP (Ref # 92171)	92171-0223	2
SCREW,TAPPING,6X20 (Ref # 92172)	92172-0488	3
WASHER,5.5X20X1.2 (Ref # 92200)	92200-0284	2
NUT,LEAF SPRING,6MM (Ref # 92210)	92210-0624	3
INNER FENDER KIT (Ref # 99999)	99999-0055	1