


# 2013 BRUTE FORCE® 650 4x4i

## PARTS DIAGRAM

### Rear Fender(s)

F2172

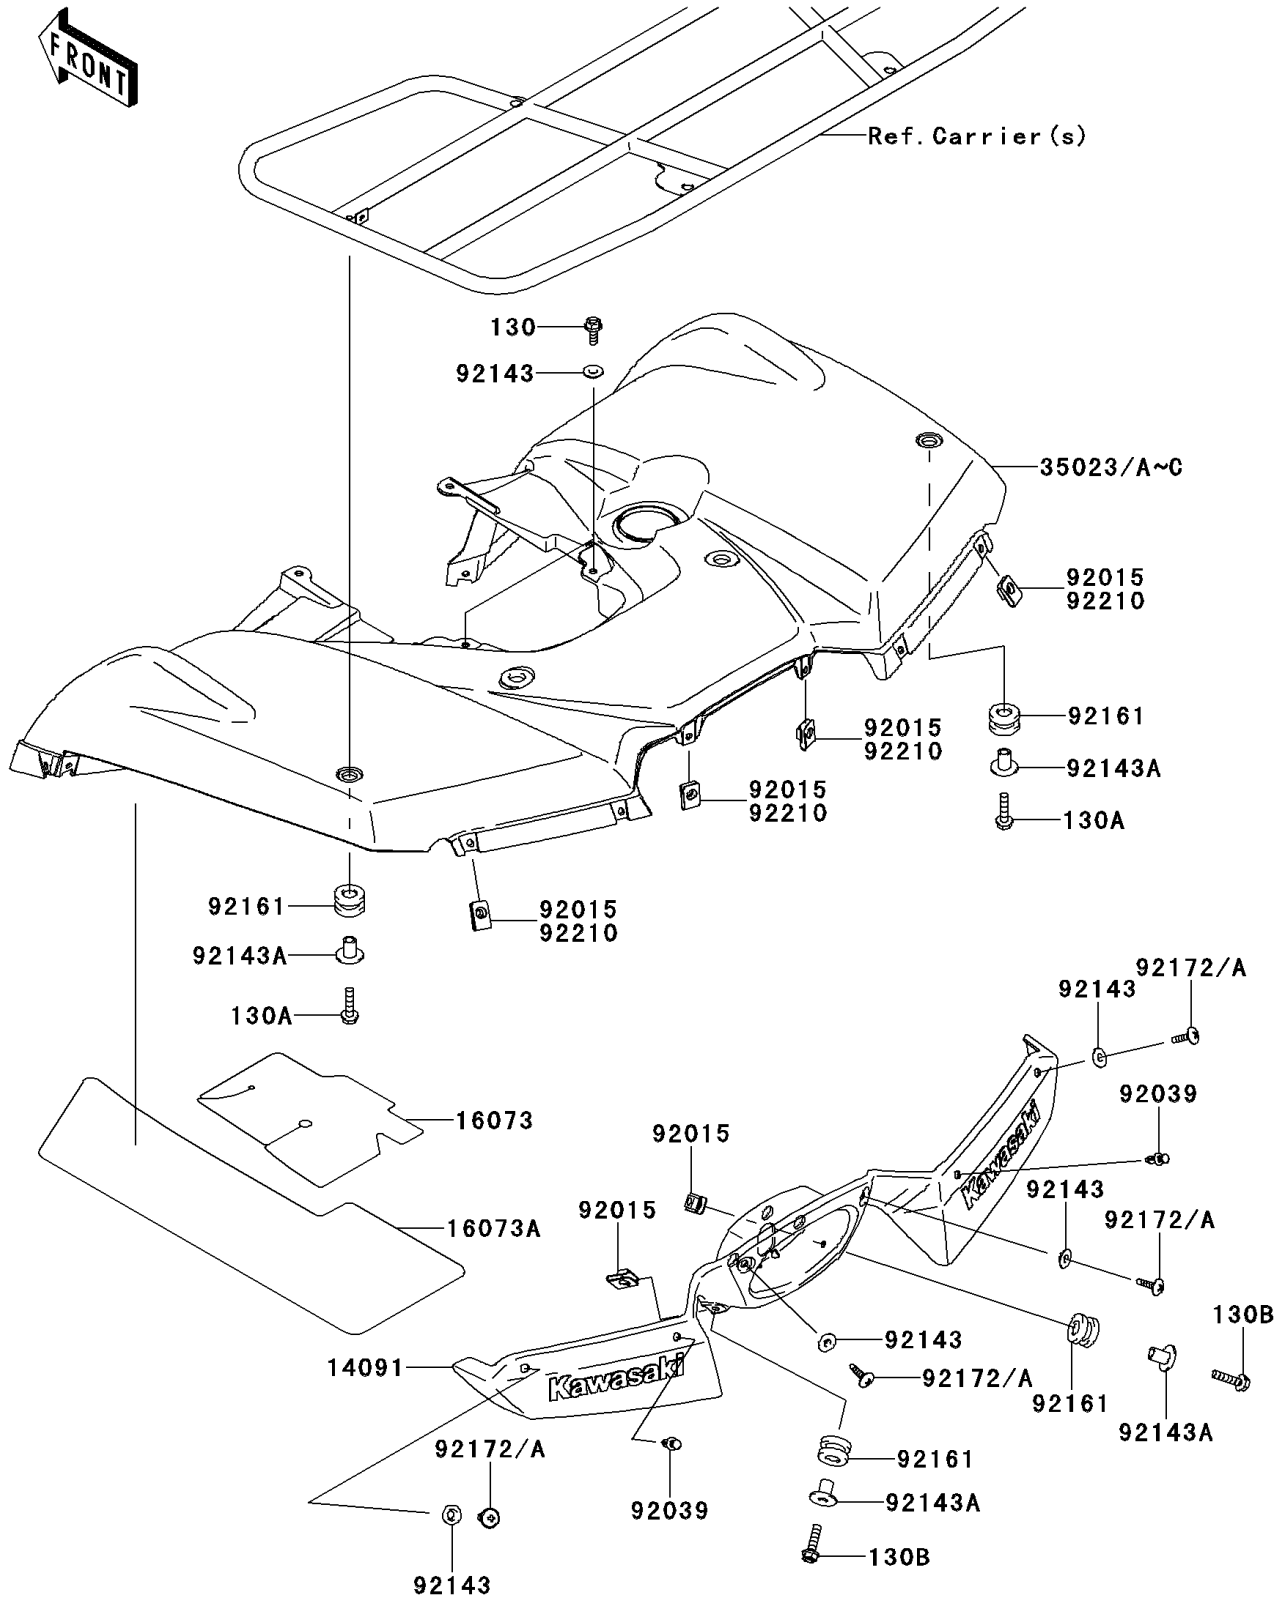

# 2013 BRUTE FORCE® 650 4x4i

## PARTS LIST

### Rear Fender(s)

ITEM NAME	PART NUMBER	QUANTITY
BOLT-FLANGED,6X16 (Ref # 130)	130BA0616	2
BOLT-FLANGED,6X25 (Ref # 130A)	130BA0625	2
BOLT-FLANGED,6X25 (Ref # 130B)	130BB0625	2
COVER,TAIL LAMP,F.BLACK (Ref # 14091)	14091-0252-6Z	1
INSULATOR,REAR FENDER,INNER (Ref # 16073)	16073-0031	1
INSULATOR,REAR FENDER,OUTER (Ref # 16073A)	16073-0032	1
FENDER-REAR,S.BLACK (Ref # 35023C)	35023-0314-839	1
NUT,6MM (Ref # 92015)	92015-1602	2
RIVET (Ref # 92039)	92039-1229	2
COLLAR (Ref # 92143)	92143-1087	6
COLLAR (Ref # 92143A)	92143-1960	4
DAMPER (Ref # 92161)	92161-0106	4
SCREW,TAPPING,6X20 (Ref # 92172A)	92172-0488	4
NUT,LEAF SPRING,6MM (Ref # 92210)	92210-0624	4