


2010 Brute Force 650 4x4i Hardwoods Green HD (Canada Only)

PARTS DIAGRAM

F2280

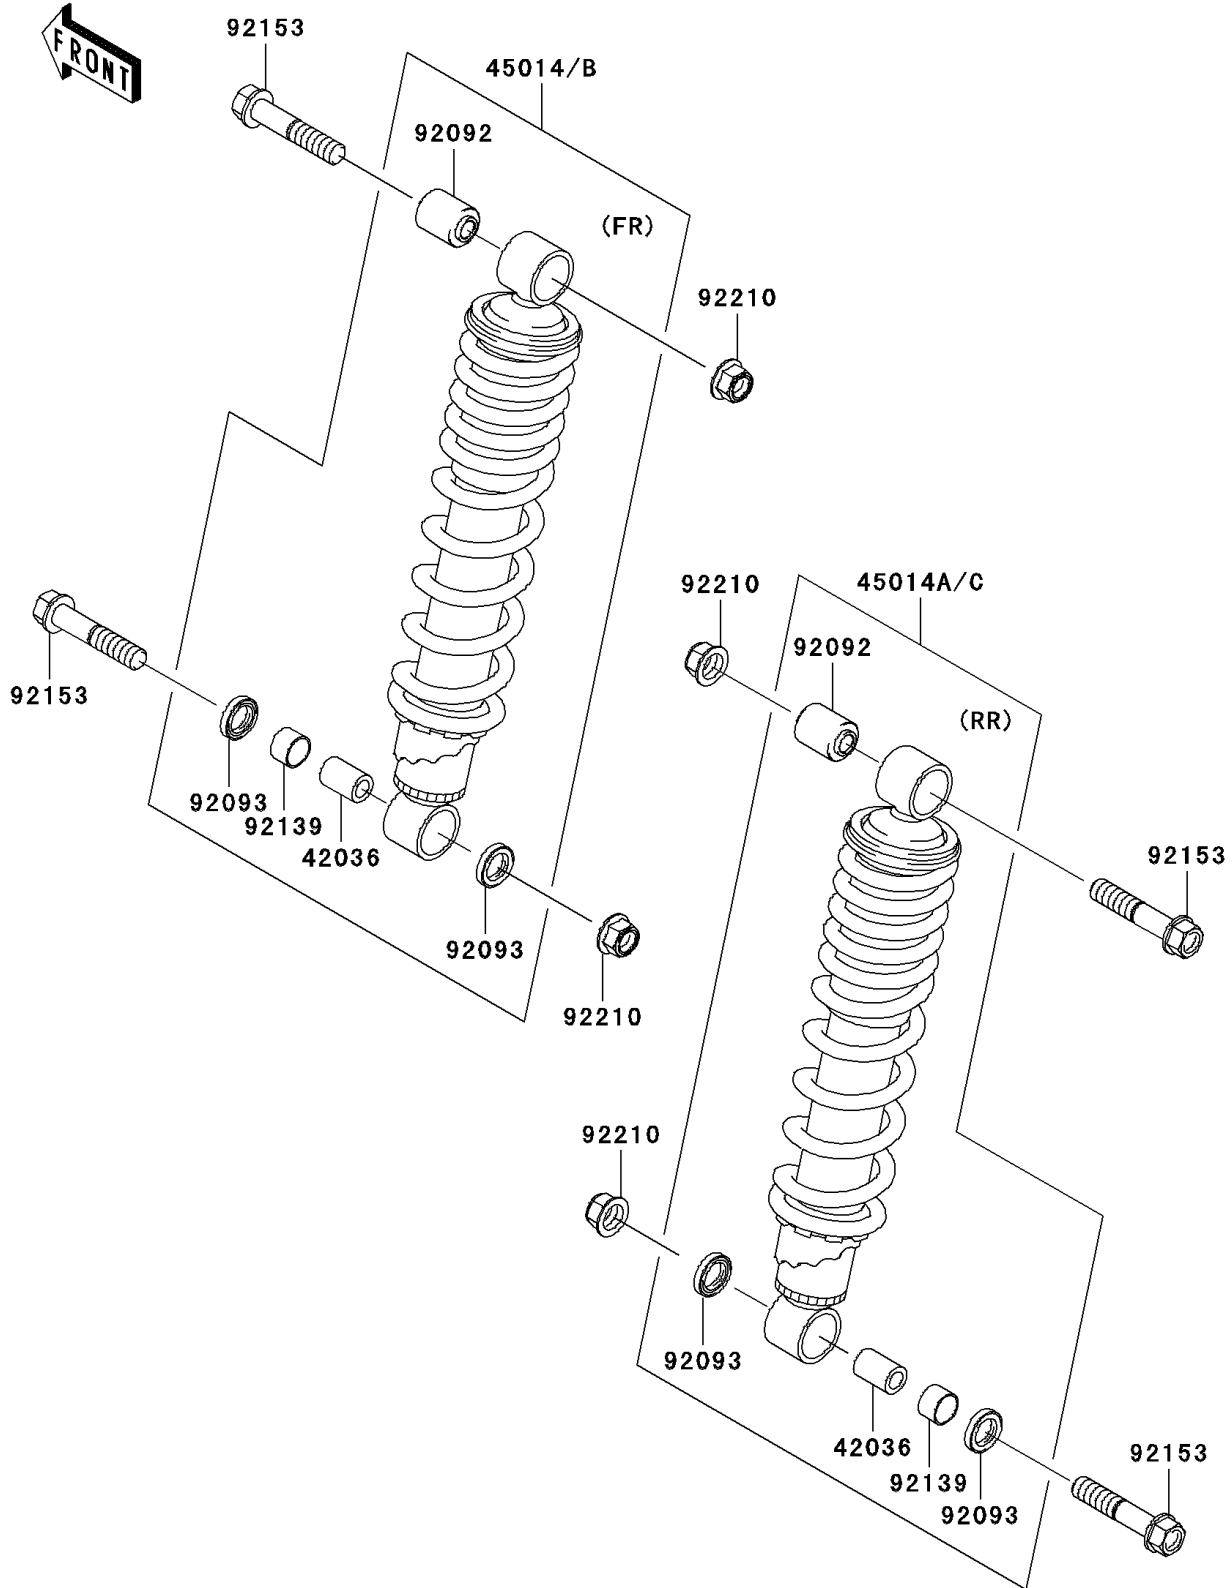

2010 Brute Force 650 4x4i Hardwoods Green HD (Canada Only)

Shock Absorber(s) PARTS LIST

ITEM NAME	PART NUMBER	QUANTITY
SLEEVE (Ref # 42036)	42036-0018	4
SHOCKABSORBER,FR,E COAT BLACK (Ref # 45014B)	45014-0203-17D	2
SHOCKABSORBER,RR,E COAT BLACK (Ref # 45014C)	45014-0204-17D	2
BUSHING-RUBBER (Ref # 92092)	92092-0007	4
SEAL (Ref # 92093)	92093-0033	8
BUSHING (Ref # 92139)	92139-0084	4
BOLT,FLANGED,10X50 (Ref # 92153)	92153-1139	8
NUT,LOCK,FLANGED,10MM (Ref # 92210)	92210-0276	8